



PARTS CATALOGUE

MODEL YEAR 2004

TZR50 5WX5 HUN

TZR50 5WX5 NLD

TZR50 5WX5 ITA

 
TZR50 5WX5 POL

TZR50 5WX5 SVN


TZR50 5WX5 SWE

Model Code	Starting Frame ID	Starting Engine ID
5WX5	RA031008914	

Colour Type	Colour Code	Colour Name	Colour Abbreviation
A	0791	SILVER 3	S3
B	0564	DEEP PURPLISH BLUE METALLIC C	DPBMC

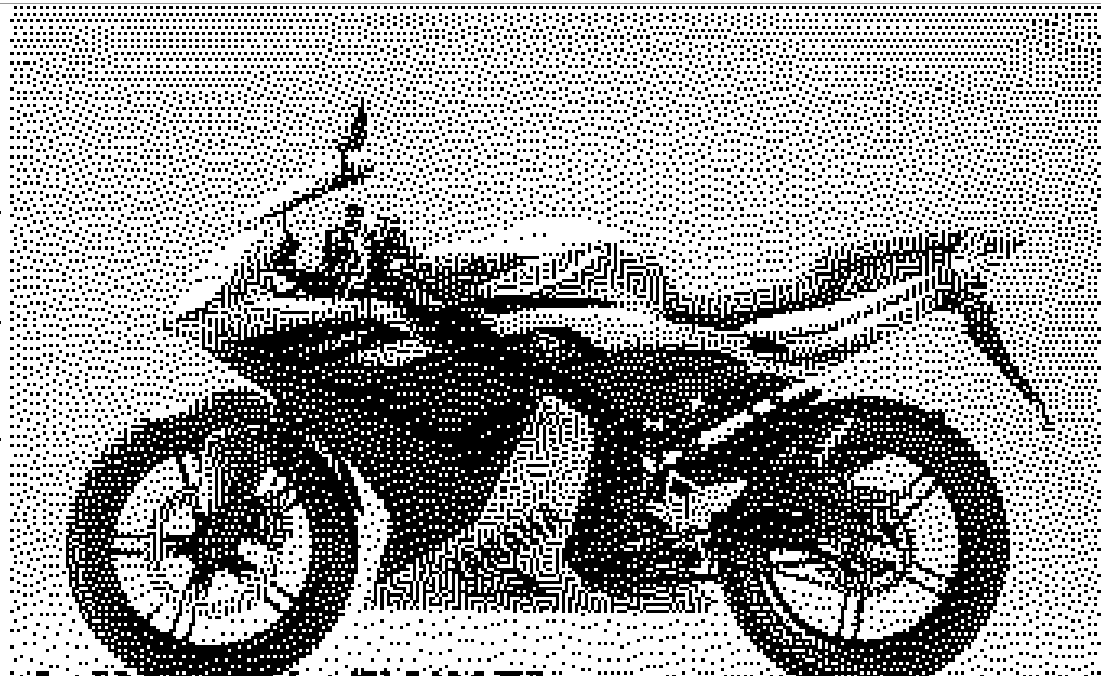


A [Model: 5WX5]

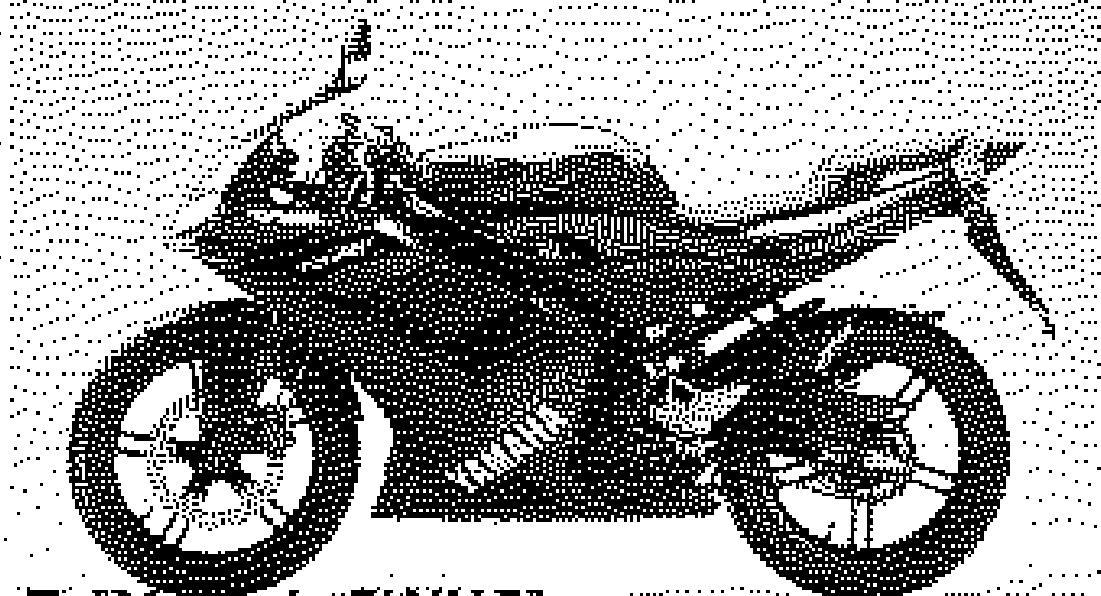 


B [Model: 5WX5]

Ref No	Part No	Description
01	4YV-E1111-30-00	Head, Cylinder 1
02	94701-00X00-00	Plug, Spark (ngk Br9es)
03	90430-14822-00	Gasket
04	4YV-E1194-00-00	Gasket, Head Cover 2
05	4YV-E1193-00-00	Gasket, Head Cover 1
06	90176-07813-00	Nut, Crown
07	90201-078L0-00	Washer, Plate
08	5WX-E1311-00-00	Cylinder 1
09	4YV-E1351-00-00	Gasket, Cylinder
10	4YV-E2411-00-00	Thermostat
11	98907-04010-00	Screw, Bind
12	4YV-E2482-00-00	Pipe 2
13	4YV-E2486-00-00	Clip

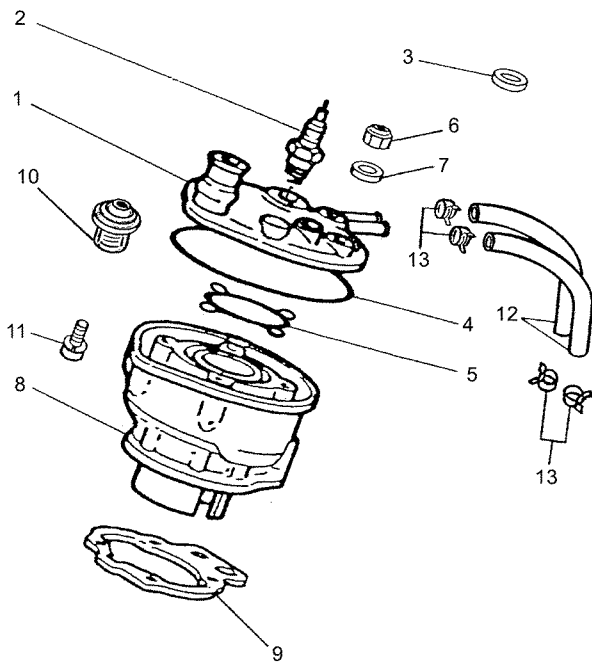 

5WX1352-B010

 
CRANKSHAFT & PISTON

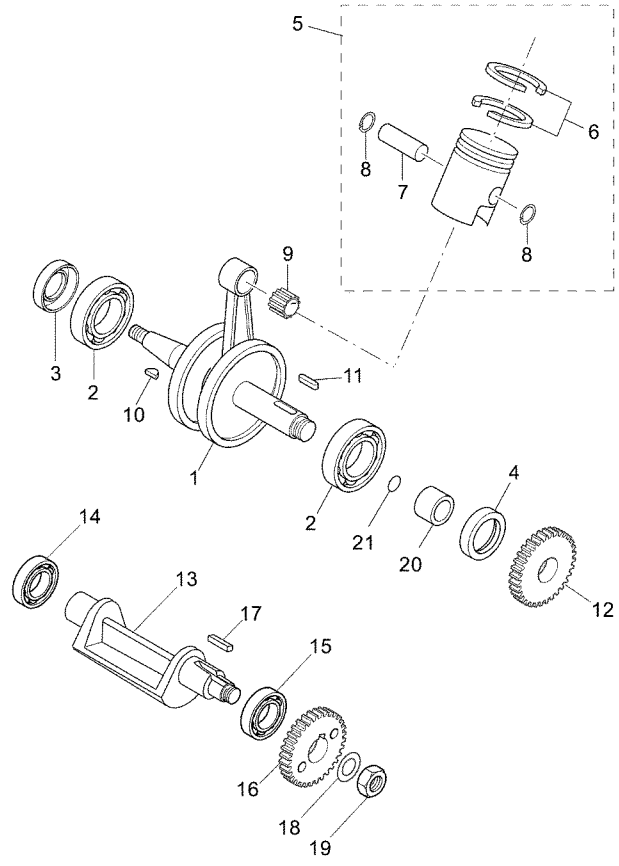

Ref No	Part No	Description
01	5WX-E1400-00-00	Crankshaft Assy
02	93306-303X6-00	Bearing
03	93101-17832-00	Oil Seal
04	93101-24835-00	Oil Seal
05	4YV-E1631-00-00	Piston (std)
05	4YV-E1635-00-00	Piston (0.25mm O/s)
05	4YV-E1636-00-00	Piston (0.50mm O/s)
06	4YV-E1603-00-00	• . Piston Ring Set (std)
06	4YV-E1604-00-00	• . Piston Ring Set (0.25mm O/s)
06	4YV-E1605-00-00	• . Piston Ring Set (0.50mm O/s)
07	4YV-E1633-00-00	• . Pin, Piston
08	93450-12816-00	• . Circlip
09	93310-112X5-00	Bearing
10	90280-03805-00	Key, Woodruff
11	90282-04806-00	Key, Straight
12	4YV-E1536-00-00	Gear, Drive
13	4YV-E1454-00-00	Weight 1
14	93306-202X2-00	Bearing
15	93306-203X6-00	Bearing
16	4YV-E1531-00-00	Gear, Balance Weight
17	90282-04807-00	Key, Straight
18	90201-128L1-00	Washer, Plate
19	90170-12853-00	Nut
20	90387-16X02-00	Collar
21	93210-138E4-00	O-ring



 5WX1352-B020

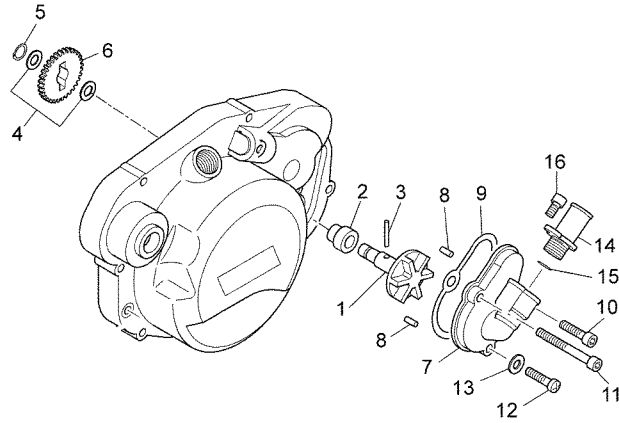


Ref No	Part No	Description
01	2VR-E2450-00-00	Impeller Shaft Assy
02	93103-10812-00	Oil Seal
03	93603-22X00-00	Pin, Dowel
04	90201-08512-00	Washer, Plate
05	93440-08130-00	Circlip
06	3NC-E2459-00-00	Gear, Impeller Shaft
07	3NC-E2422-00-00	Cover, Housing
08	93604-10X00-00	Pin, Dowel
09	3NC-E2428-01-00	Gasket, Housing Cover 2
10	9131N-06025-00	Bolt
11	9131N-06055-00	Bolt
12	9890N-06025-00	Screw, Bind
13	90430-06X01-00	Gasket
14	4YV-E2582-00-00	Joint, Hose 2
15	93210-12327-00	O-ring
16	90110-06X21-00	Bolt, Hexagon Socket Head



5WX1352-B030


Ref No	Part No	Description
01	4BA-E2460-00-00	Radiator Assy
02	2RN-E2462-00-00	. . Cap, Radiator
03	2RN-E2437-00-00	. . Stopper
04	9700M-05012-00	. . Bolt
05	9290M-05100-00	. . Washer
06	90480-15363-00	. . Grommet
07	90387-07392-00	. . Collar
08	90480-16284-00	Grommet
09	9580M-06025-00	Bolt, Flange
10	90201-060A3-00	Washer, Plate
11	4YV-E2481-10-00	Pipe 1
12	90450-27X00-00	Hose Clamp Assy
13	4YV-E2483-00-00	Pipe 3
14	90450-27X00-00	Hose Clamp Assy
15	90460-27815-00	Clamp, Hose
16	90464-13X00-00	Clamp
17	5WX-F1871-00-00	Tank, Recovery
18	2RN-F1815-00-00	Cap
19	90119-06056-00	Bolt, With Washer
20	90445-09X00-00	Hose
21	90467-09006-00	Clip

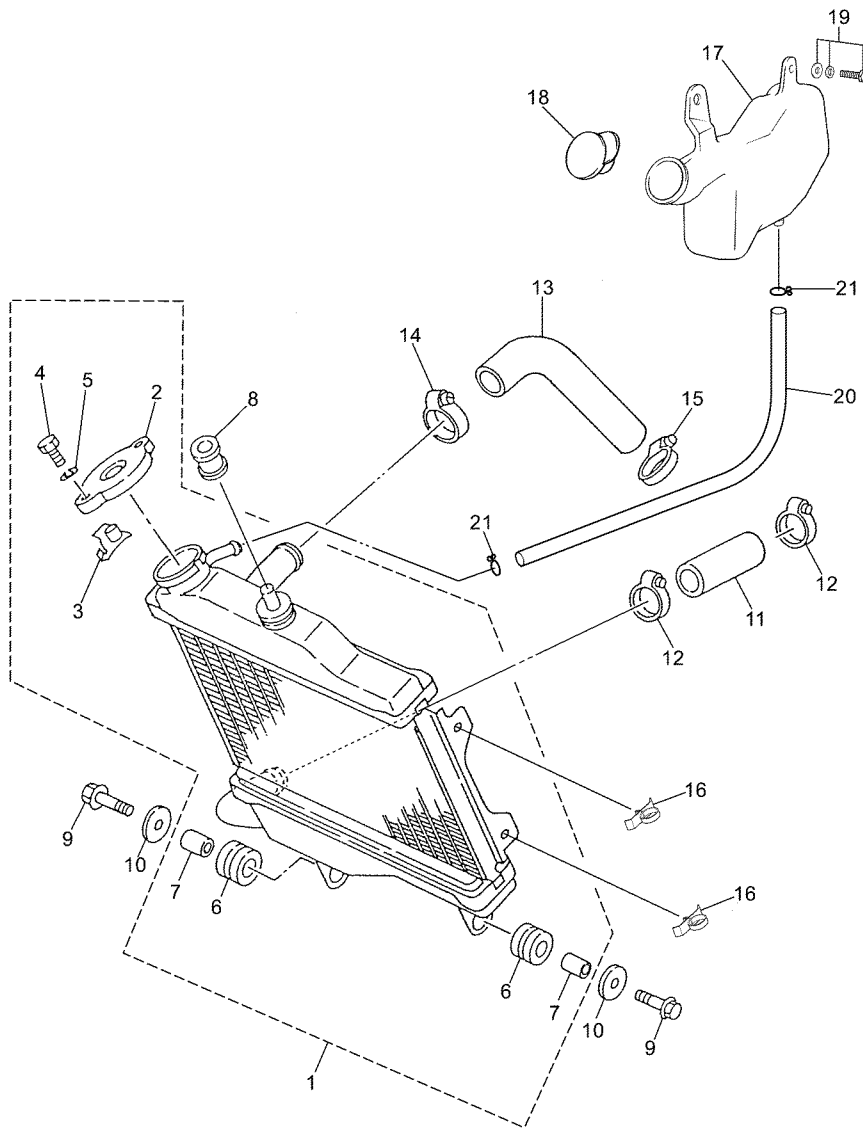 


5WX1352-B040

Ref No Part No Description

01	5WX-E3100-01-00	Oil Pump Assy
02	5WX-E316F-00-00	. . Hose, Oil 1
03	93430-08036-00	. . Circlip
04	4YV-E316G-10-00	. . Hose, Oil 2
05	90468-02X00-00	. . Clip
06	90465-08028-00	Clamp
07	9131N-05016-00	Bolt
08	4YV-E3178-00-00	Gear, Pump Drive
09	93603-22X00-00	Pin, Dowel
10	90201-088L3-00	Washer, Plate
11	93440-08130-00	Circlip
12	4YV-E3226-00-00	Shaft, Drive Gear
13	4YV-E3179-00-00	Gear, Idle
14	90201-088L3-00	Washer, Plate
15	90201-08512-00	Washer, Plate
16	93440-08130-00	Circlip
17	5WX-E5416-00-00	Cover, Oil Pump
18	5WX-E3174-00-00	Holder, Oil Pipe
19	5WX-E5379-00-00	Seal, Crankcase
20	9131N-05035-00	Bolt

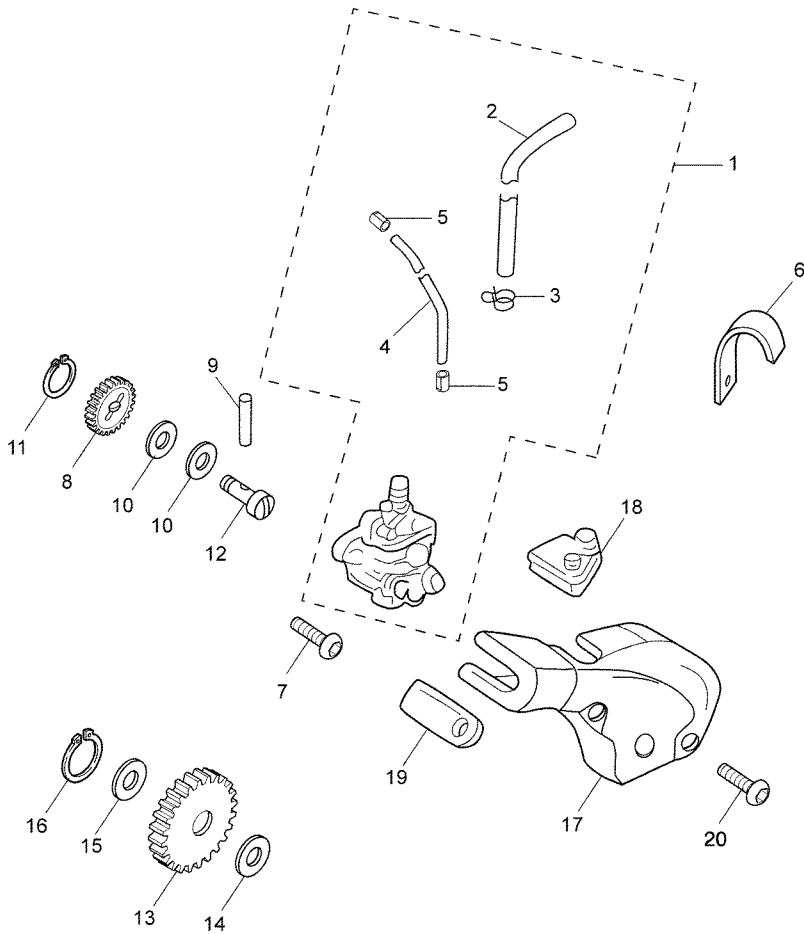 


5WX1352-B050

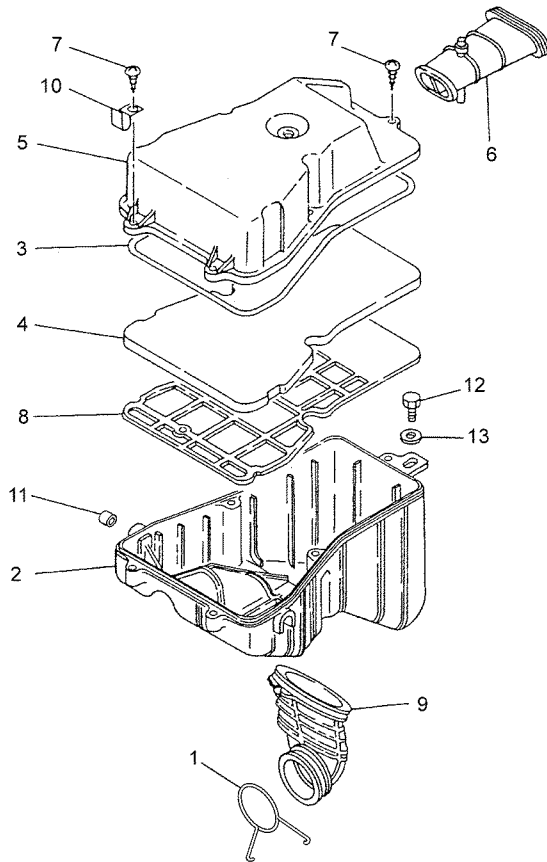 

Ref No	Part No	Description
01	90467-24140-00	Clip
02	5WX-E4411-00-00	Case, Air Cleaner 1
03	2RN-E4452-00-00	Seal
04	2RN-E4451-00-00	Element, Air Cleaner
05	2RN-E4412-00-00	Cap, Cleaner Case 1
06	4BA-E4437-00-00	Duct
07	9770L-50525-00	Screw, Tapping
08	4BA-E4472-00-00	Plate, Element
09	4YV-E4453-10-00	Joint, Air Cleaner 1
10	4BA-E4415-00-00	Holder, Wire
11	90445-12718-00	Hose (19)
12	9700L-06016-00	Bolt
13	90201-06008-00	Washer, Plate



 
5WX1352-B060

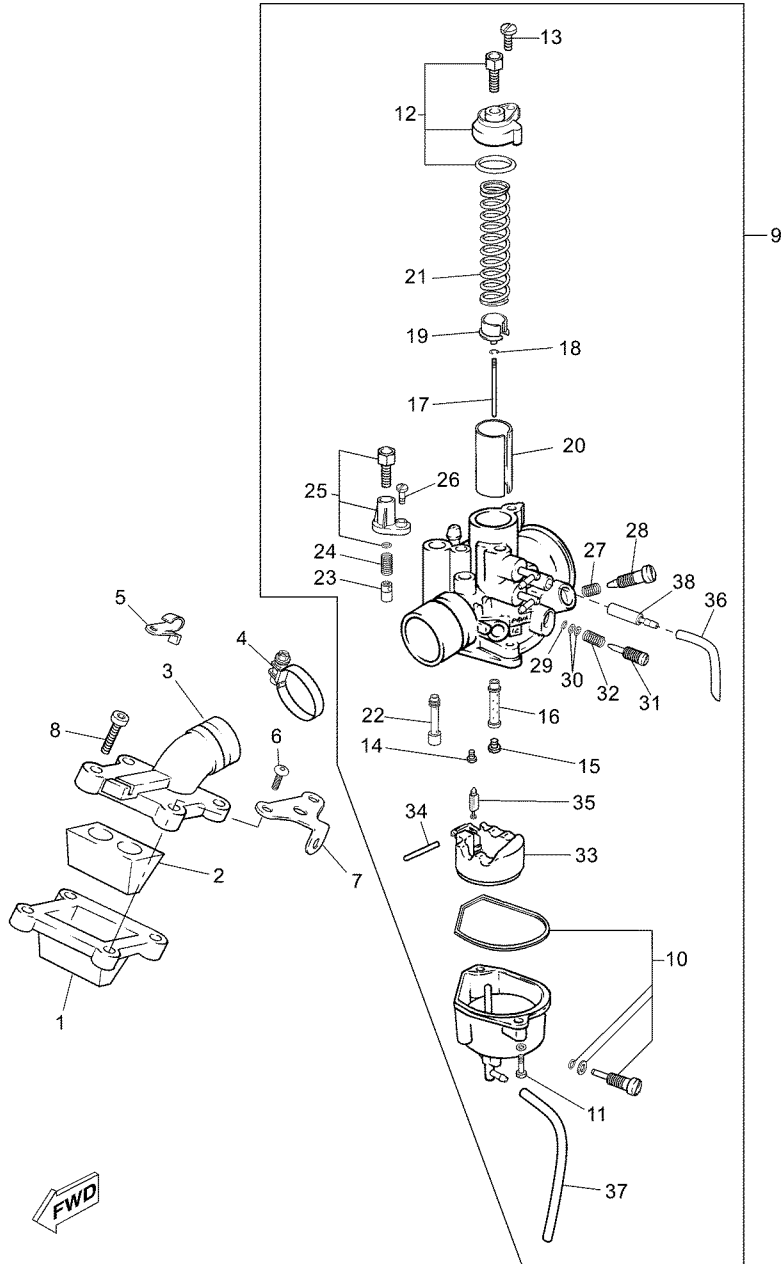

Ref No	Part No	Description
01	4YV-E3610-00-00	Reed Valve Assy
02	4YV-E3625-00-00	Spacer, Reed Valve
03	4YV-E3565-10-00	Joint, Carburetor
04	90450-32X00-00	Hose Clamp Assy
05	4YV-E5441-00-00	Holder, Clutch Cable
06	90149-06X02-00	Screw
07	5WX-E4291-00-00	Bracket 1
08	90110-06X33-00	Bolt, Hexagon Socket Head
09	5WX-E4D01-00-00	Carburetor Assy 1
10	5WX-14D81-00-00	. Body, Float Chamber
11	5RN-E4D16-00-00	. Screw
12	5WX-14D73-00-00	. Cover, Plunger Cap
13	5SB-E4325-00-00	. Screw, Pan Head
14	5BW-E4342-00-00	. Jet, Pilot (# 0)
15	5WX-14D43-44-00	. Jet, Main
16	5WX-14D41-21-00	. Nozzle, Main
17	5WX-14D36-13-00	. Needle
18	4SB-E4137-00-00	. Clip
19	4SB-E4377-00-00	. Stopper
20	5RN-E4D12-40-00	. Valve,throttle 1
21	4SB-E4331-01-00	. Spring, Throttle Valve
22	5DU-E4344-00-00	. Jet, Starter (# 0)
23	5WX-14D90-00-00	. Needle Valve Assy
24	5WX-14D31-00-00	. Spring, Throttle Valve
25	5WX-14D95-00-00	. Cap
26	5WX-14D25-00-00	. Screw, Pan Head
27	4SB-E4134-00-00	. Spring, Air Adjusting
28	4SB-E4104-00-00	. Air Screw Set
29	5WX-14D98-00-00	. Gasket
30	4SB-E4357-00-00	. Washer, Plain
31	4SB-E4103-01-00	. Throttle Screw Set
32	4SB-E4133-01-00	. Spring, Throttle Stop
33	5WX-14D85-00-00	. Float
34	5WX-14D65-00-00	. Pin, Clevis
35	5WX-14D51-00-00	. Needle Valve
36	5DU-E4396-00-00	. Pipe
37	5WX-14D49-00-00	. Pipe 1
38	5WX-14D88-00-00	. Valve, Vacuum Control

5WX1352-B070


Ref No	Part No	Description
01	5WX-E4703-00-00	Muffler Comp. 1
02	93210-25X00-00	O-ring
03	90506-18856-00	Spring, Tension
04	9570M-08500-00	Nut, Flange
05	9582M-08035-00	Bolt, Flange
06	9582M-08016-00	Bolt, Flange
07	9290M-08600-00	Washer
08	90201-08X08-00	Washer, Plate
09	5WX-E4874-00-00	Pipe 4
10	90467-16X00-00	Clip
11	5FC-14803-00-00	Air Induction System Assy
12	9850M-06012-00	Screw, Pan Head
13	5WX-E4873-00-00	Pipe 3
14	90467-16X00-00	Clip
15	5WX-E4872-00-00	Pipe 2
16	4KM-14714-01-00	Gasket, Muffler
17	9581L-06012-00	Bolt, Flange

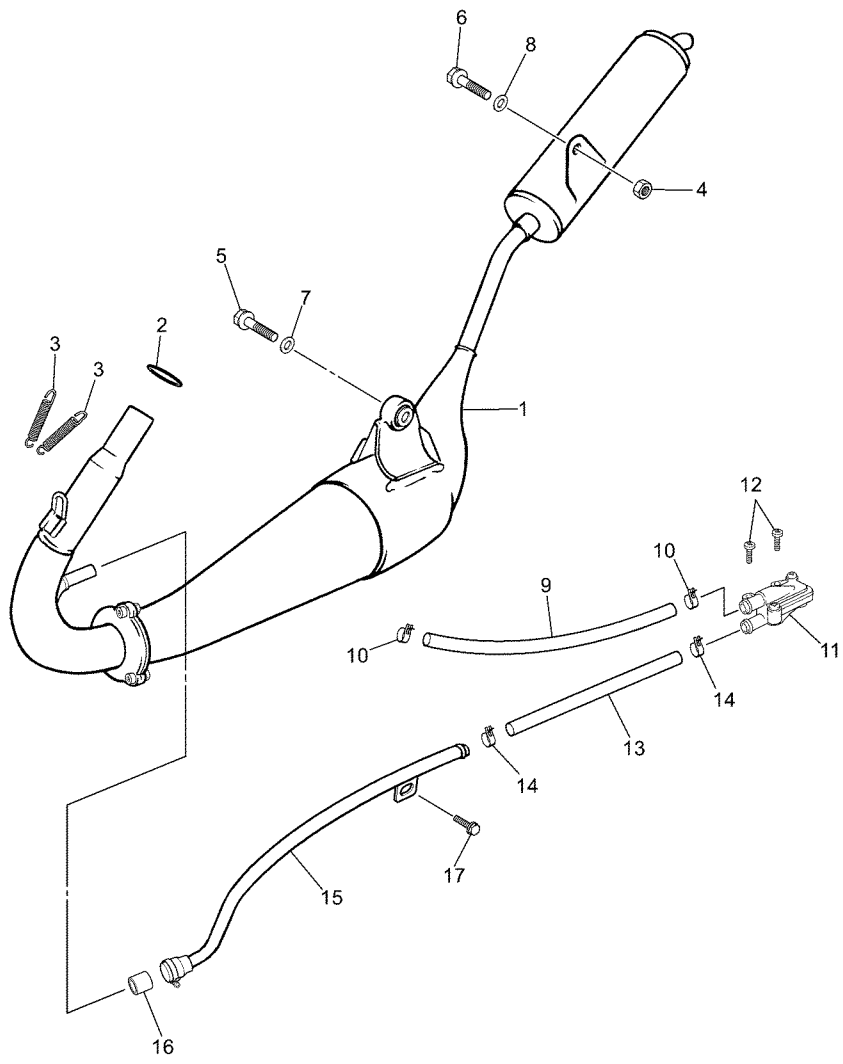 

5WX1352-B080


CRANKCASE

Ref No	Part No	Description
01	5WX-E5150-00-0	Crankcase Assy
02	90116-07835-00	Bolt, Stud
03	91812-12805-00	Pin, Dowel
04	9131N-06040-00	Bolt
05	3FN-E5371-00-0	Breather
06	90445-05773-00	Hose (I450)
07	4YV-E5128-00-0	Holder
08	9131N-05012-00	Bolt
09	90101-08873-00	Bolt
10	90201-08X01-00	Washer, Plate
11	90101-12874-00	Bolt
12	90430-12823-00	Gasket

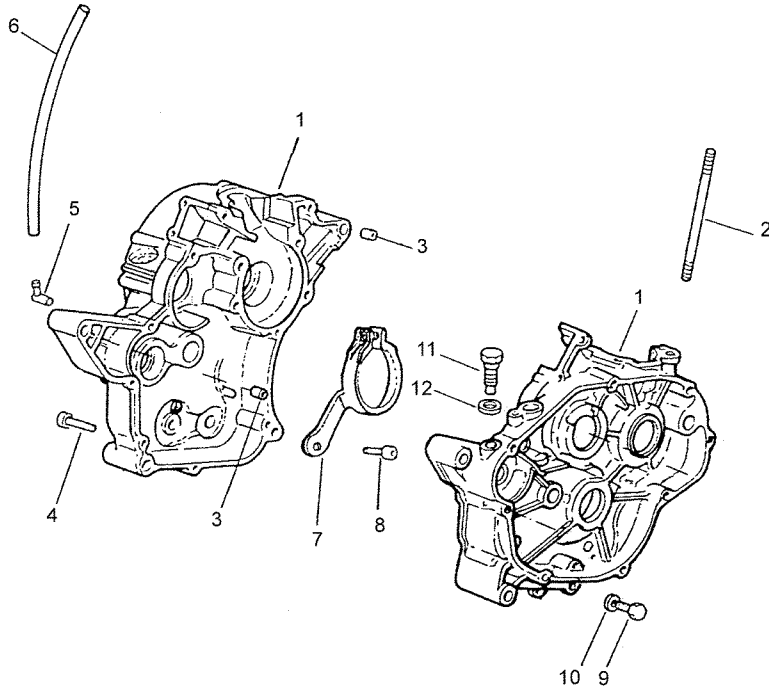 


5WX1352-B090

Ref No	Part No	Description
01	5WX-E5411-00-00	Cover, Crankcase 1
02	4YV-E5431-00-00	Cover, Crankcase 3
03	90387-058P0-00	Collar
04	9131M-05014-00	Bolt
05	9131N-05020-00	Bolt
06	4YV-E5451-00-00	Gasket, Crankcase Cover 1
07	5WX-E5421-00-00	Cover, Crankcase 2
08	4YV-E5149-00-00	Pin
09	4YV-E5461-00-00	Gasket, Crankcase Cover 2
10	91809-08806-00	Pin, Dowel
11	90110-06X05-00	Bolt, Hexagon Socket Head
12	4YV-E5363-00-00	Plug, Oil
13	93210-15X01-00	O-ring
14	90154-06812-00	Screw, Binding
15	90430-06X01-00	Gasket
16	4YV-E5378-00-00	Holder
17	90201-08X01-00	Washer, Plate
18	5WX-E3228-00-00	Adjuster Oil
19	90170-05X00-00	Nut
20	5WX-E3118-00-00	Bolt, Adjusting

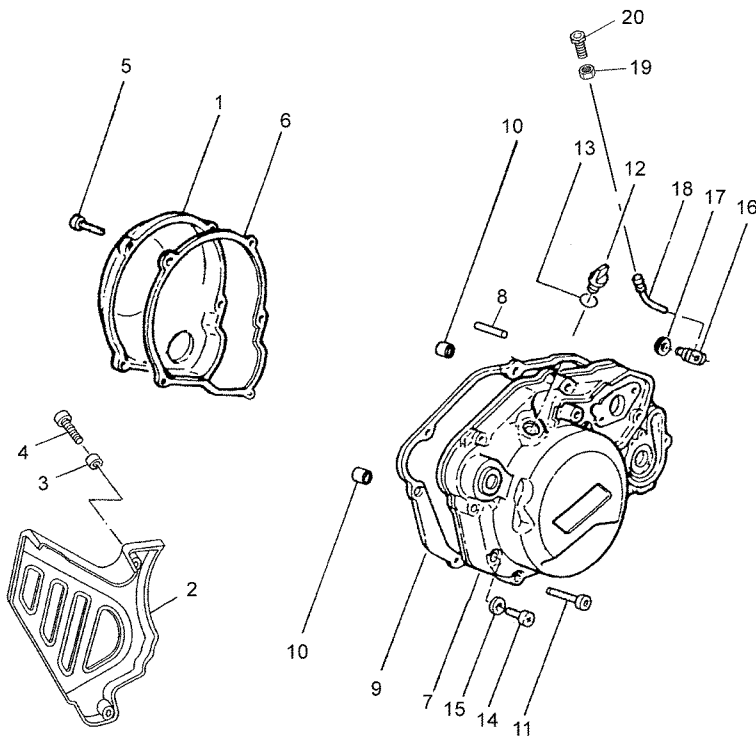 

5WX1352-B100

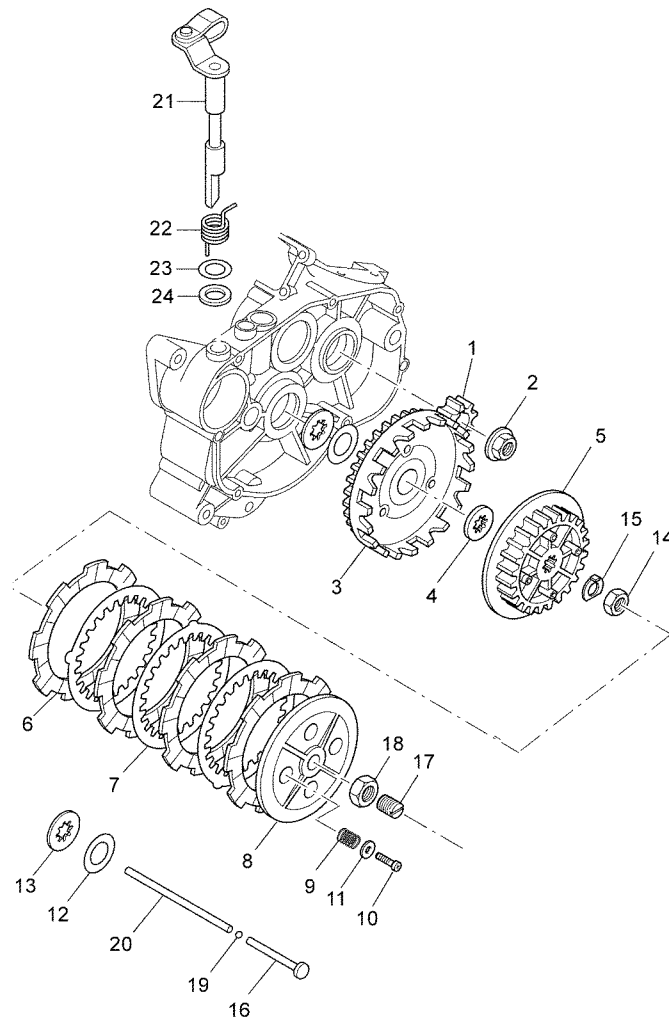 


Ref No	Part No	Description
01	4YV-E6111-00-00	Gear, Primary Drive
02	90179-12248-00	Nut
03	4YV-E6150-00-00	Primary Driven Gear Comp.
04	4YV-E6154-00-00	Plate, Thrust 1
05	4YV-E6371-00-00	Boss, Clutch
06	3NC-E6331-00-00	Plate, Friction 2
07	2AH-E6324-00-00	Plate, Clutch 1
08	4YV-E6351-00-00	Plate, Pressure 1
09	90501-20859-00	Spring, Compression
10	91317-05020-00	Bolt
11	90201-058L4-00	Washer, Plate
12	4YV-E6164-00-00	Plate, Thrust 2
13	90208-17807-00	Washer, Conical Spring
14	90170-12854-00	Nut
15	90215-12271-00	Washer, Lock
16	4YV-E6356-00-00	Rod, Push 1
17	90113-14804-00	Bolt, Set
18	90170-14855-00	Nut
19	93503-16003-00	Ball
20	4YV-E6357-00-00	Rod, Push 2
21	4YV-E6381-00-00	Push Lever Comp.
22	90508-20846-00	Spring, Torsion
23	90201-158L5-00	Washer, Plate
24	93101-15833-00	Oil Seal



5WX1352-B110


TRANSMISSION

Ref No	Part No	Description
01	4YV-E7411-00-00	Axle, Main
02	4YV-E7151-00-00	Gear, 5th Pinion
03	4YV-E7131-00-00	Gear, 3rd Pinion
04	4YV-E7161-00-00	Gear, 6th Pinion
05	4YV-E7121-00-00	Gear, 2nd Pinion
06	93440-14815-00	Circlip
07	93440-18816-00	Circlip
08	93306-203YC-00	Bearing
09	93315-21429-00	Bearing
10	4YV-E7421-00-00	Axle, Drive
11	4YV-E7211-00-00	Gear, 1st Wheel
12	4YV-E7251-00-00	Gear, 5th Wheel
13	4YV-E7241-00-00	Gear, 4th Wheel
14	4YV-E7231-00-00	Gear, 3rd Wheel
15	4YV-E7261-00-00	Gear, 6th Wheel
16	4YV-E7221-00-00	Gear, 2nd Wheel
17	93440-20825-00	Circlip
18	90201-148L6-00	Washer, Plate
19	93410-14815-00	Circlip
20	90201-208L7-00	Washer, Plate
21	90201-208L8-00	Washer, Plate
22	93410-20825-00	Circlip
23	93315-21429-00	Bearing
24	93306-204X1-00	Bearing
25	93102-20873-00	Oil Seal
26	5WX-E7460-00-00	Sprocket, Drive
27	93410-20825-00	Circlip

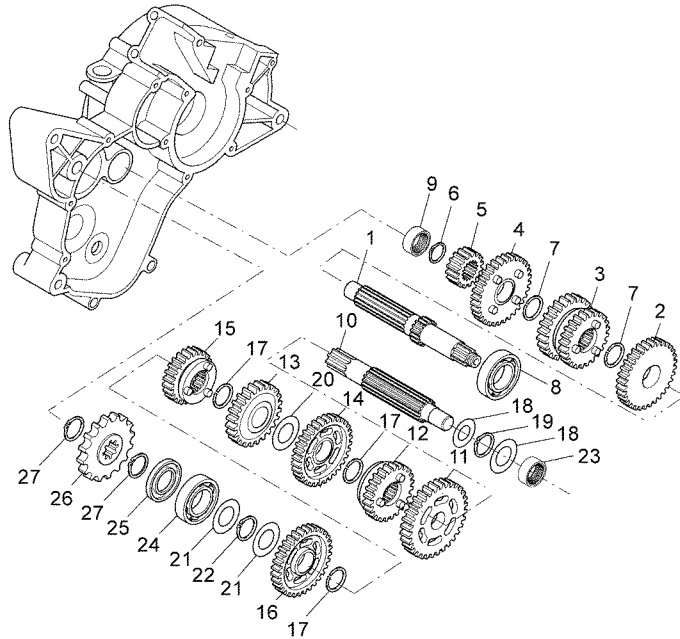 


5WX1352-B120

Ref No	Part No	Description
01	4YV-E7861-00-00	Axle, Drive Gear
02	4YV-E7831-00-00	Gear, Drive
03	90201-088L3-00	Washer, Plate
04	4YV-E7841-00-00	Gear, Driven
05	3NC-E7811-00-00	Housing, Tachometer Gear
06	93210-12327-00	O-ring
07	4L0-17818-00-00	Gasket
08	90110-06X21-00	Bolt, Hexagon Socket Head

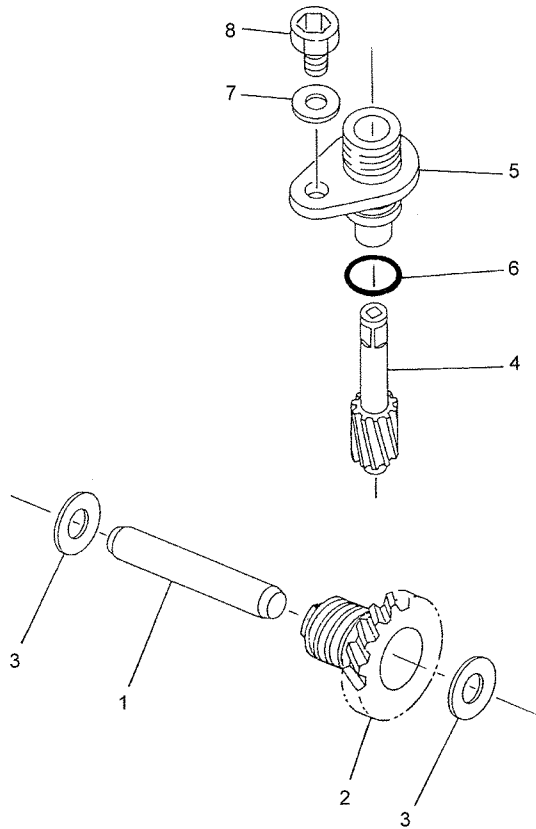 


5WX1352-B130

Ref No	Part No	Description
01	5WX-E8540-00-00	Shift Cam Assy
02	90201-108L9-00	Washer, Plate
03	4YV-E8542-00-00	Point, Neutral
04	90501-12860-00	Spring, Compression
05	93500-09827-00	Ball
06	4YV-E8511-00-00	Fork, Shift 1
07	4YV-E8512-00-00	Fork, Shift 2
08	4YV-E8513-00-00	Fork, Shift 3
09	4YV-E8531-00-00	Bar, Shift Fork Guide 1
10	4YV-E8535-00-00	Bar, Shift Fork Guide 2
11	90205-07801-00	Washer, Tooth
12	90170-07856-00	Nut

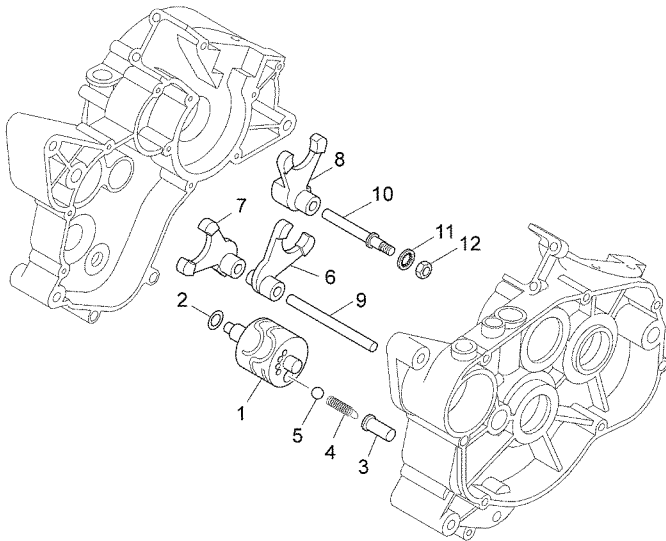 


5WX1352-B140

Ref No	Part No	Description
01	4YV-E8101-00-00	Shift Shaft Assy
02	90508-28847-00	Spring, Torsion
03	90381-12805-00	Bush, Solid
04	99001-10600-00	Circlip
05	90201-108L9-00	Washer, Plate
06	4YV-E8141-00-00	Plate, Stopper
07	90201-128M0-00	Washer, Plate
08	90387-128P2-00	Collar
09	90501-18861-00	Spring, Compression
10	90201-128L1-00	Washer, Plate
11	90201-128M1-00	Washer, Plate
12	93101-12834-00	Oil Seal
13	5WX-E8111-00-00	Pedal, Shift
14	5T8-E8113-00-00	Cover, Shift Pedal
15	5WX-E8115-00-00	Rod, Shift
16	90387-06X25-00	Collar
17	90201-06815-00	Washer, Plate
18	91401-25012-00	Pin, Cotter
19	5WX-E8112-01-00	Arm, Shift
20	9581L-06020-00	Bolt, Flange
21	90387-08725-00	Collar
22	90201-086P8-00	Washer, Plate
23	90111-08800-00	Bolt

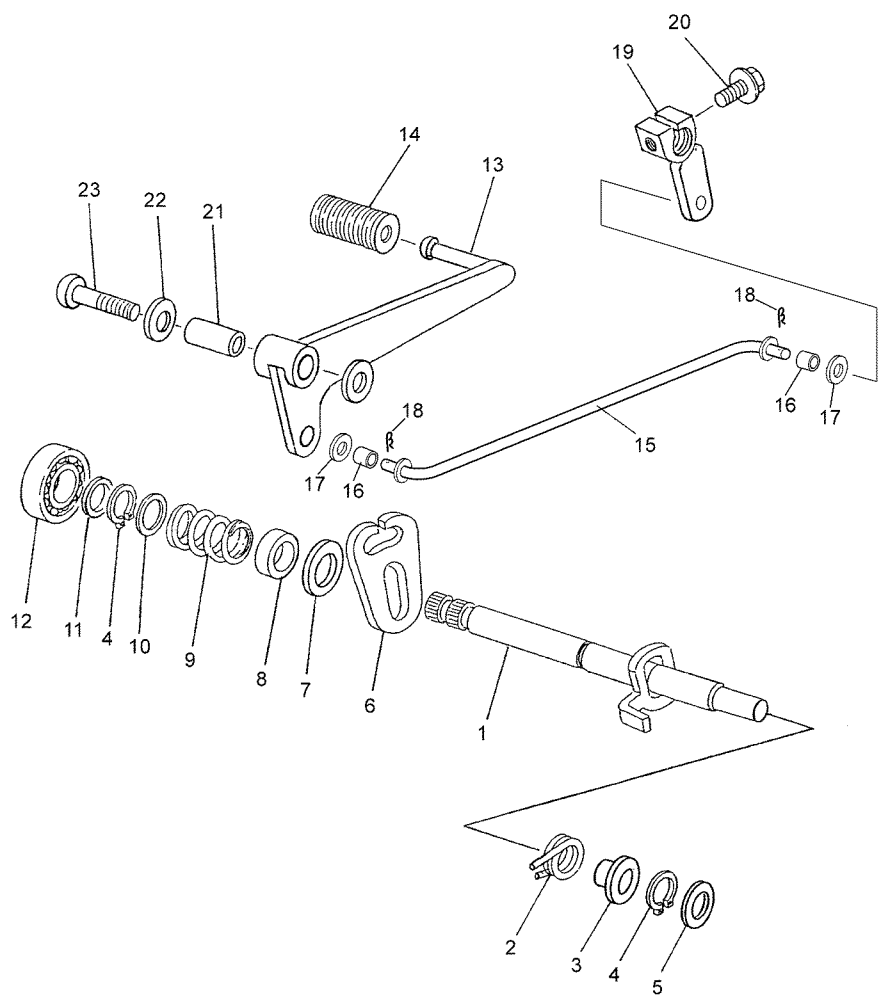 


FWD
5WX1352-B150

Ref No	Part No	Description
01	5WX-F1110-00-98	Frame Comp.
02	4YV-F1418-00-00	Bracket, Front Lower 2
03	9582M-08012-00	Bolt, Flange
04	90105-08875-00	Bolt, Flange
05	95607-08200-00	Nut, Self-locking
06	4BA-F1288-00-00	Guide, Cable
07	9580M-06012-00	Bolt, Flange

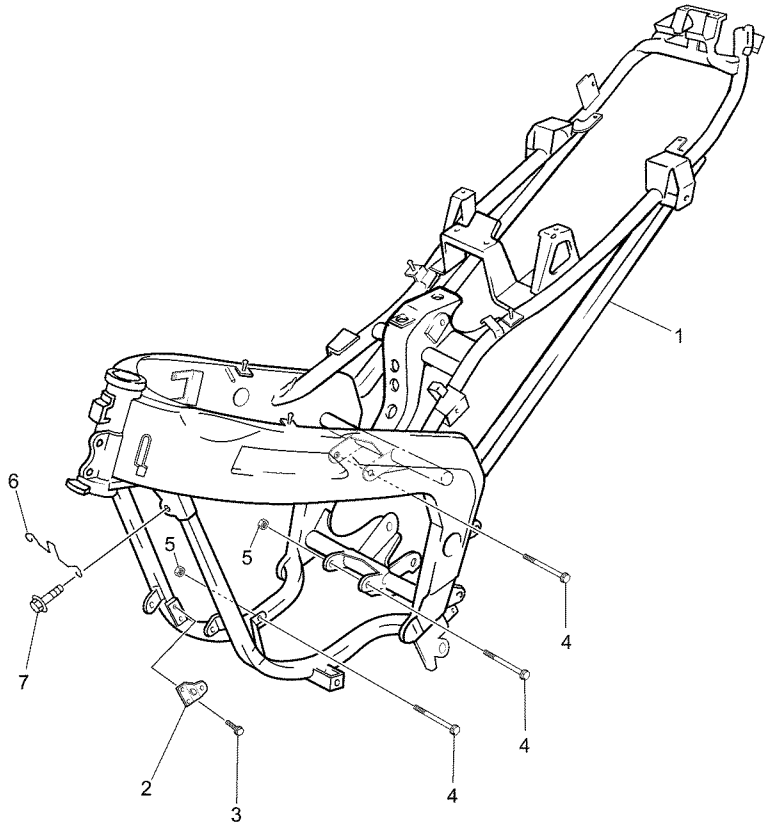 

5WX1352-B160

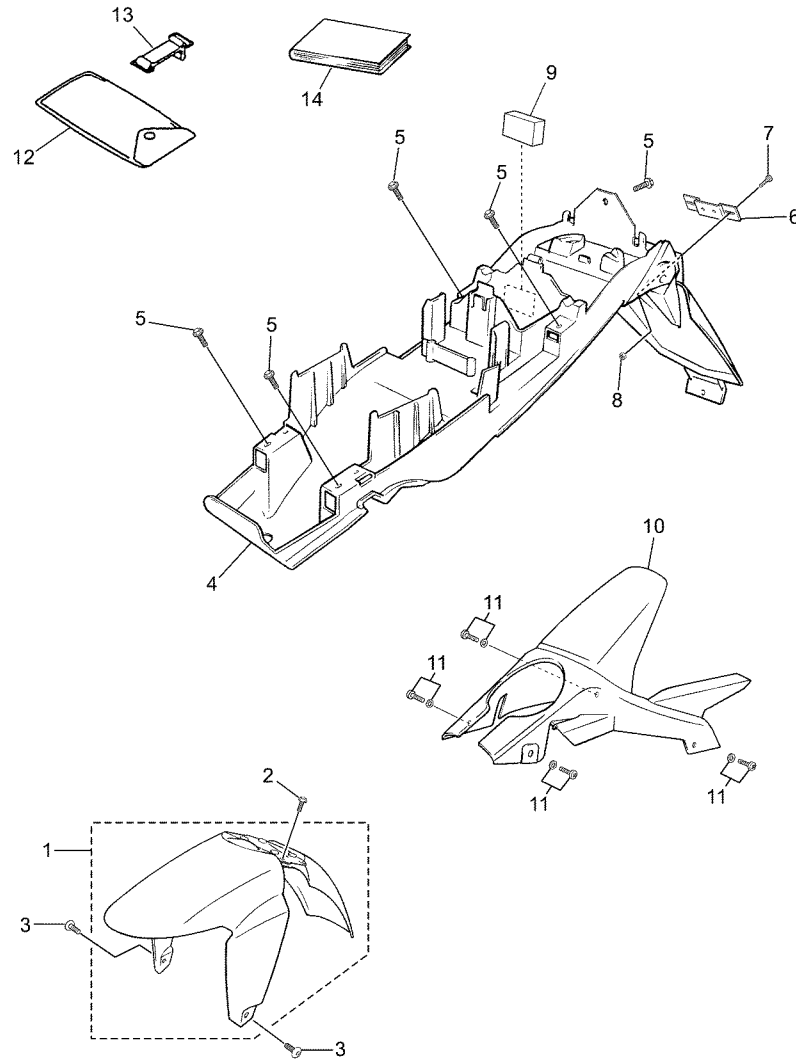 


Ref No	Part No	Description
01	5WX-F1510-10-P0	Front Fender Comp.
01	5WX-F1510-10-P1	Front Fender Comp.
02	9502L-06012-00	Bolt, Flange
03	90110-05201-00	Bolt, Hexagon Socket Head
04	5WX-F1629-00-00	Guard, Mud
05	9580M-06012-00	Bolt, Flange
06	5WX-F1682-00-00	Stay, Plate
07	9890M-06016-00	Screw, Bind
08	9570N-06500-00	Nut, Flange
09	5WX-F1669-00-00	Seal
10	5WX-F1650-00-00	Rear Fender Comp.
11	90159-06X02-00	Screw, With Washer
12	5WX-F8100-00-00	Tool Kit
13	1TK-H2131-00-00	Band, Battery
14	5WX-F8199-D1-00	Manual,owner's
14	5WX-F8199-E1-00	Manual,owner's
14	5WX-F8199-F1-00	Manual,owner's
14	5WX-F8199-G1-00	Manual,owner's
14	5WX-F8199-S1-00	Manual,owner's
14	5WX-F8199-H1-00	Manual,owner's



5WX1352-B170

Ref No Part No Description


01	5WX-F1711-00-00	Cover, Side 1
02	5WX-F1721-00-00	Cover, Side 2
03	90159-06X00-00	Screw, With Washer
04	90480-12X04-00	Grommet
05	5WX-F1731-00-P1	Cover, Side 3
05	5WX-F1731-00-P3	Cover, Side 3
06	5WX-F1741-00-P1	Cover, Side 4
06	5WX-F1741-00-P3	Cover, Side 4
07	90480-01141-00	Grommet
08	9890M-06016-00	Screw, Bind
09	90167-04X00-00	Screw, Tapping
10	5WX-F1751-00-00	Tank, Oil
11	3WG-F1771-00-00	Body, Cap
12	90167-04X00-00	Screw, Tapping
13	5DS-F8317-00-00	Nut, Emblem
14	90467-11X01-00	Clip
15	4BA-F4198-00-00	Seat, Rubber
16	5WX-F1788-00-00	Graphic
17	5WX-F1789-00-00	Graphic

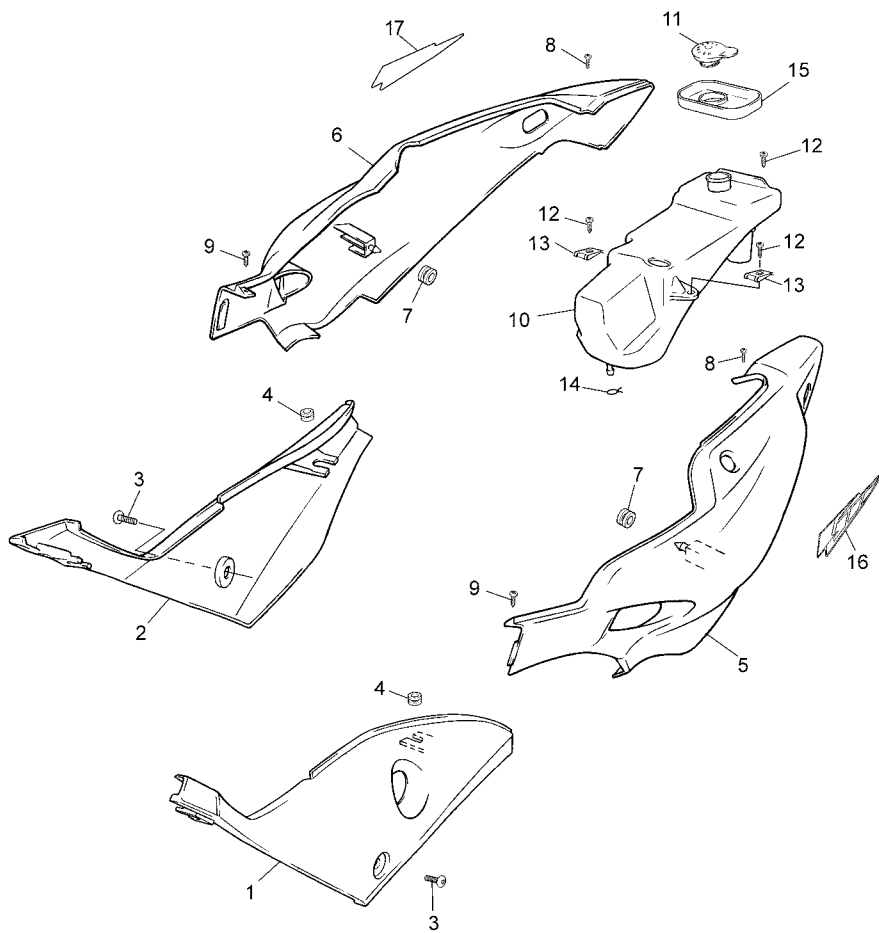 

5WX5300-C180

REAR ARM & SUSPENSION


Ref No	Part No	Description
01	5WX-F2110-00-98	Rear Arm Comp.
02	93315-31841-00	Bearing
03	2RN-F2128-00-00	Cover, Thrust 1
04	4BA-F2184-00-00	Bush
05	29N-22141-00-00	Shaft, Pivot
06	95607-12200-00	Nut, Self-locking
07	4BA-F139W-00-00	Cover
08	4YV-F2151-00-00	Seal, Guard
09	90387-06869-00	Collar
10	90201-06815-00	Washer, Plate
11	9750M-06416-00	Bolt, With Washer
12	5WX-F2210-00-00	Shock Absorber Assy, Rear
13	90109-10833-00	Bolt
14	90387-128E2-00	Collar
15	90209-10229-00	Washer
16	90185-10091-00	Nut, Self-locking
17	90101-12676-00	Bolt
18	90201-12X02-00	Washer, Plate
19	95607-12100-00	Nut, U

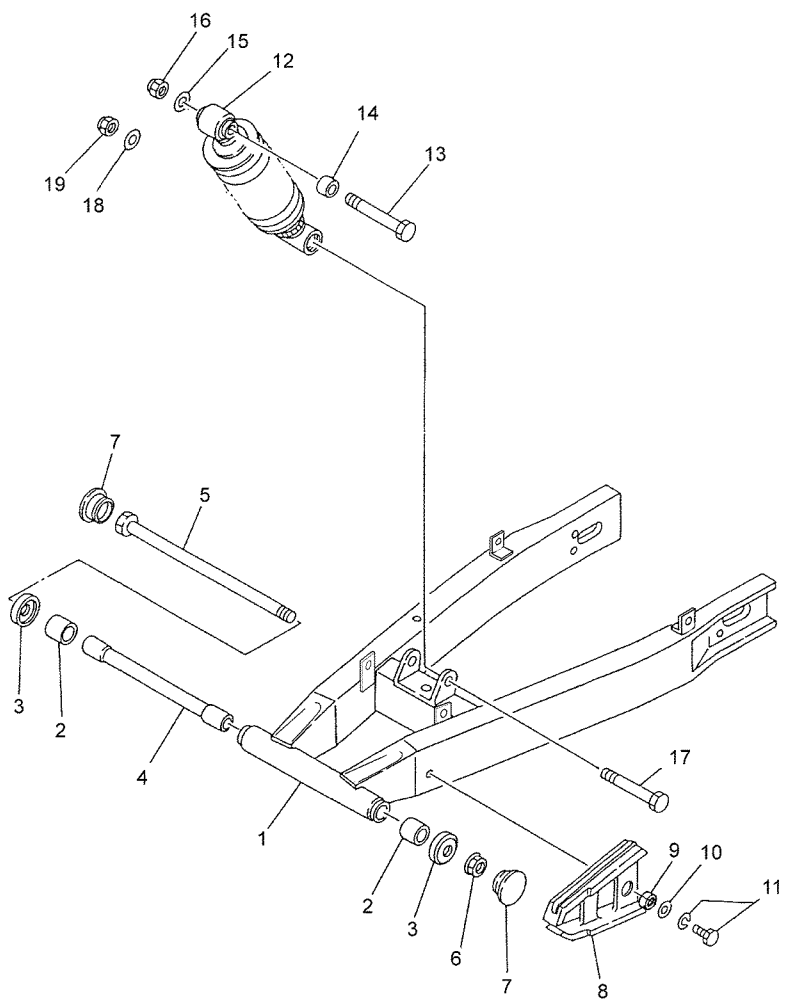 


5WX1352-B190

Ref No	Part No	Description
--------	---------	-------------

01	156-23412-00-00	Race, Ball 2
02	183-23411-00-00	Race, Ball 1
03	183-23412-00-00	Race, Ball 2
04	93501-04011-00	Ball
05	21L-F3415-00-00	Cover, Ball Race 1
06	90179-25X00-00	Nut
07	5WX-F3435-00-98	Crown, Handle
08	90105-14060-00	Bolt, Flange
09	9131L-08035-00	Bolt
10	5WX-F312H-00-00	Clamp
11	4BA-F3466-00-00	Clamp
12	9580M-06012-00	Bolt, Flange

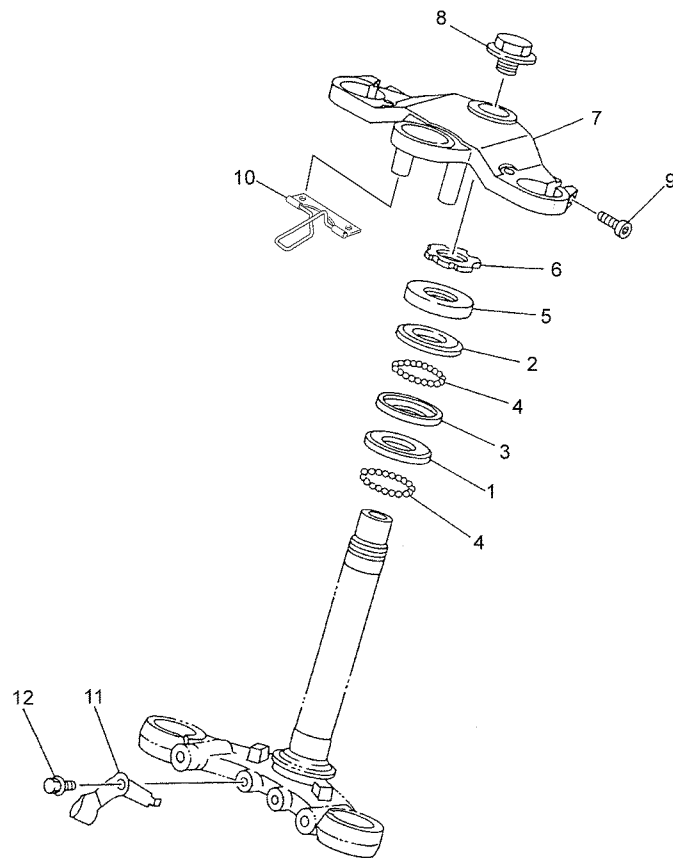 

5WX1352-B200

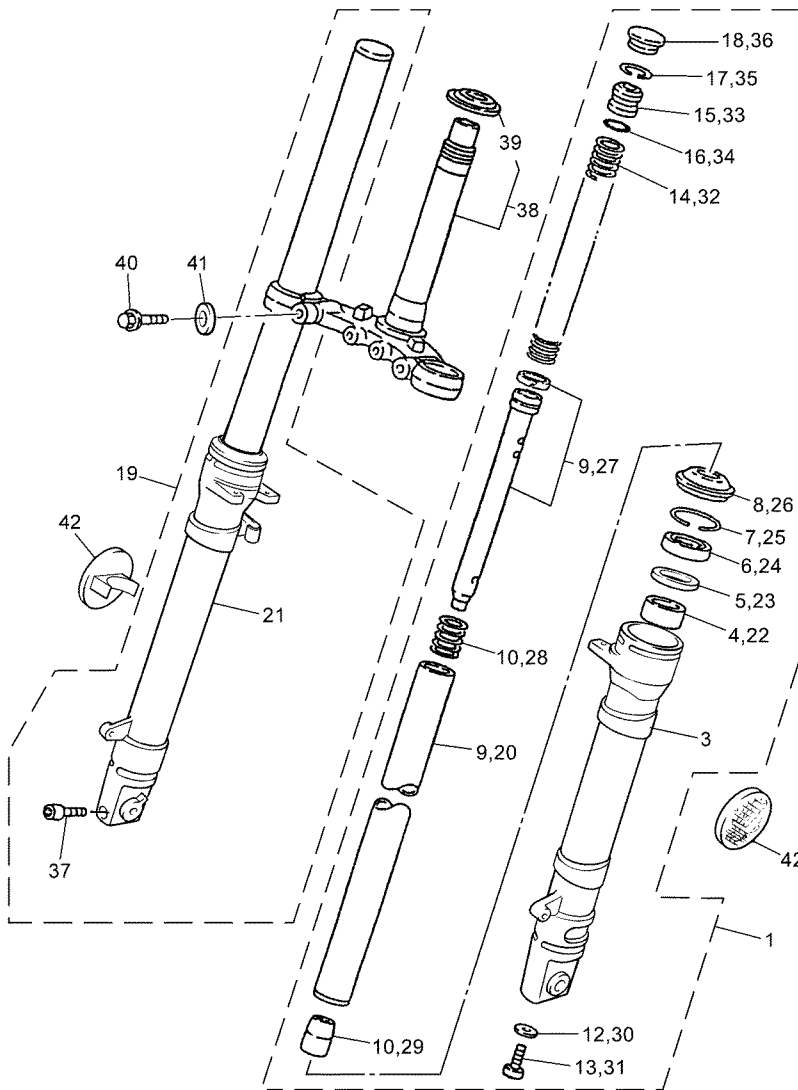 


Ref No	Part No	Description
01	5WX-F3102-00-00	Front Fork Assy (l.h)
02	4YV-F3110-00-00	. Inner Tube Comp.1
03	5WX-F3126-00-00	. Tube, Outer (left)
04	5DS-F3125-00-00	. Metal, Slide 1
05	5DS-F3165-00-00	. Washer, Felt
06	5DS-F3145-00-00	. Oil Seal
07	5DS-F3156-00-00	. Clip, Oil Seal
08	5DS-F3144-00-00	. Seal, Dust
09	4YV-F3170-00-00	. Cylinder Comp., Front Fork
10	4YV-F3151-00-00	. Spring, Rebound
11	4YV-F3173-00-00	. Spindle, Taper
12	5DS-F3165-10-00	. Washer, Felt
13	4YV-F3356-00-00	. Bolt 2
14	4YV-F3141-00-00	. Spring, Front Fork
15	5DS-F3111-10-00	. Bolt, Cap
16	5DS-F3157-00-00	. Ring, Piston
17	5DS-F3183-00-00	. Circlip
18	5DS-F3154-00-00	. Plug, Inner Tube
19	5WX-F3103-00-00	Front Fork Assy (r.h)
20	4YV-F3110-00-00	. Inner Tube Comp.1
21	5WX-F3136-00-00	. Tube, Outer (right)
22	5DS-F3125-00-00	. Metal, Slide 1
23	5DS-F3165-00-00	. Washer, Felt
24	5DS-F3145-00-00	. Oil Seal
25	5DS-F3156-00-00	. Clip, Oil Seal
26	5DS-F3144-00-00	. Seal, Dust
27	4YV-F3170-00-00	. Cylinder Comp., Front Fork
28	4YV-F3151-00-00	. Spring, Rebound
29	4YV-F3173-00-00	. Spindle, Taper
30	5DS-F3165-10-00	. Washer, Felt
31	4YV-F3356-00-00	. Bolt 2
32	4YV-F3141-00-00	. Spring, Front Fork
33	5DS-F3111-10-00	. Bolt, Cap
34	5DS-F3157-00-00	. Ring, Piston
35	5DS-F3183-00-00	. Circlip
36	5DS-F3154-10-00	. Plug, Inner Tube
37	5WX-F3346-00-00	. Bolt 1
38	4YV-F3340-00-00	Under Bracket Comp.
39	156-23411-00-00	. Race, Ball 1
40	5KK-F3346-00-00	Bolt 1
41	5KK-F3165-00-00	Washer, Felt
42	5WX-H5111-00-00	Reflector, Front 1



5WX1352-B210

FUEL TANK


Ref No	Part No	Description
01	5WX-F4110-00-00	Fuel Tank Comp.
02	5WX-F411X-00-P1	Outer Panel Comp
02	5WX-F411X-00-P3	Outer Panel Comp
03	5WX-F4602-00-00	Cap Assy
04	91380-05010-00	• Bolt
05	9131M-05014-00	Bolt
06	5WX-F414A-00-00	Cover, Filler
07	5WX-F414G-00-00	Seal
08	91380-05030-00	Bolt
09	90149-06243-00	Screw
10	90202-10X00-00	Washer, Plate
11	90387-06299-00	Collar
12	90119-06X04-00	Bolt, With Washer
13	90119-06X04-00	Bolt, With Washer
14	90387-06X24-00	Collar
15	90480-14X01-00	Grommet
16	90480-13398-00	Grommet
17	90387-067K6-00	Collar
18	90183-06816-00	Nut, Spring
19	5RW-F4181-00-00	Damper, Locating 1
20	90464-50X03-00	Clamp
21	5WX-F4500-00-00	Fuel Cock Assy 1
22	5WX-F4512-00-00	• Gasket
23	5WX-F4598-00-00	• Knob
24	9131M-05020-00	• Bolt
25	90149-06011-00	Screw
26	4BA-F4313-00-00	Pipe 3
27	90467-09006-00	Clip
28	90467-10X01-00	Clip
29	90445-10X00-00	Hose
30	5WX-F4240-20-00	Graphic Set
30	5WX-F4240-30-00	Graphic Set
31	3TH-F4256-00-00	Graphic, Fuel Tank 9
32	5DS-F8317-00-00	Nut, Emblem

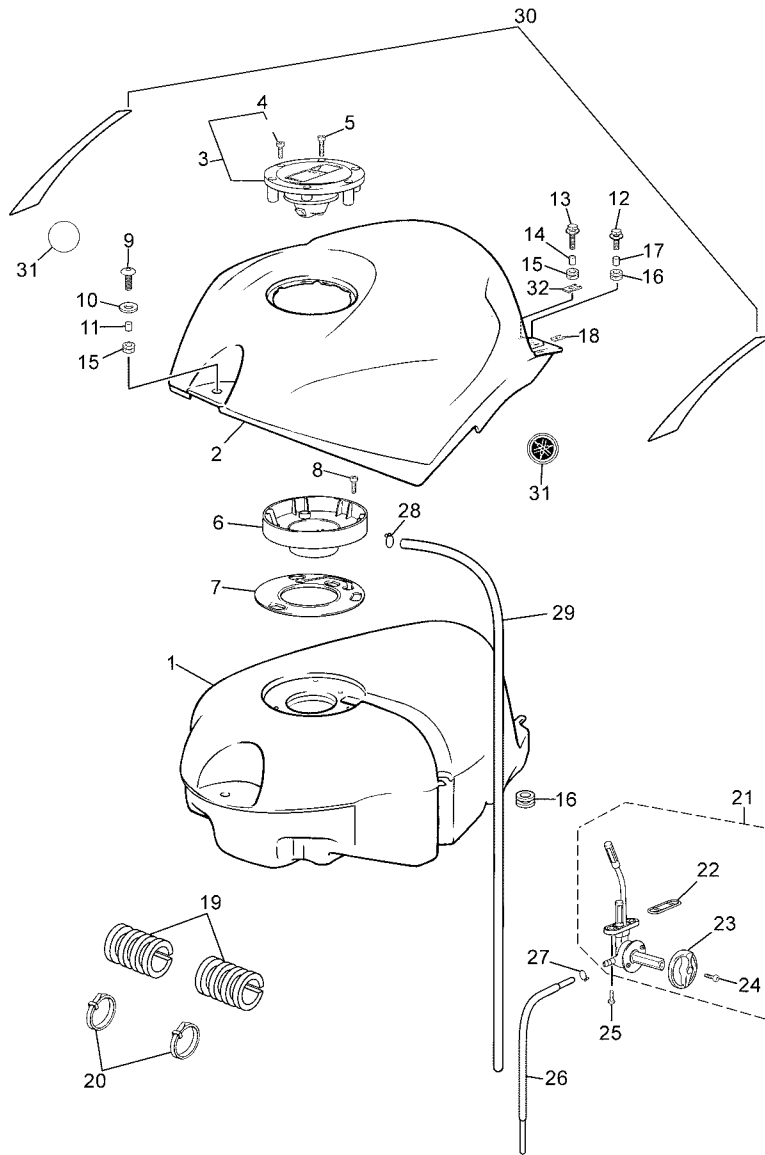 

5WX5300-C220

Ref No Part No Description


01	5WX-F4730-00-00	Double Seat Assy
02	2RN-F4741-00-00	• Pad, Seat
03	5WX-F4755-00-00	Hook, Seat
04	9580M-06012-00	Bolt, Flange
05	5WX-F478E-00-00	Cable, Seat Lock
06	5JN-F4705-00-00	Seat Lock Assy
07	5JN-F4792-00-00	Plate
08	5JN-F478V-00-00	Spring, Torsion
09	5WX-F4773-00-LK	Handle, Seat
10	92014-06016-00	Bolt, Button Head

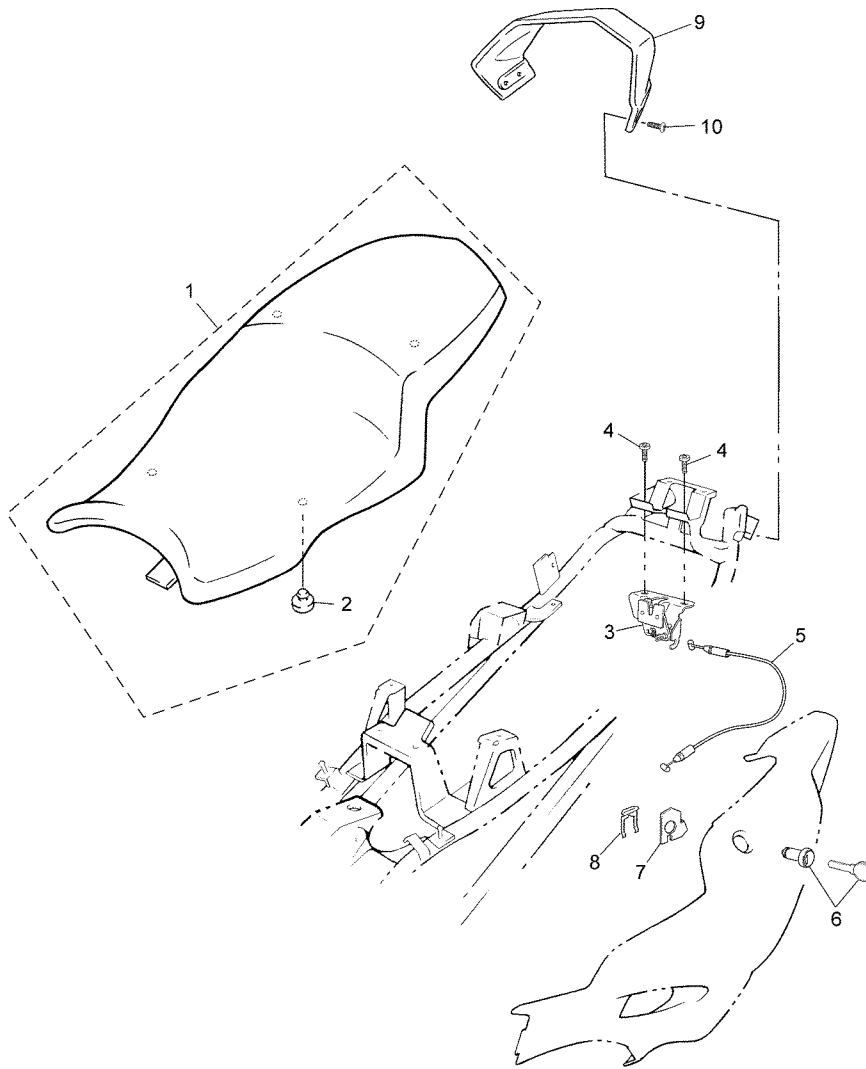 

5WX1352-B230


Ref No Part No Description

01	5WX-F5160-20-00	Cast Wheel, Front
02	5WX-F5117-00-00	. . Spacer, Bearing
03	93306-201X0-00	. . Bearing
04	93306-301YV-00	. . Bearing
05	93106-20805-00	Oil Seal
06	90387-123N2-00	Collar
07	51Y-25181-00-00	Axle, Wheel

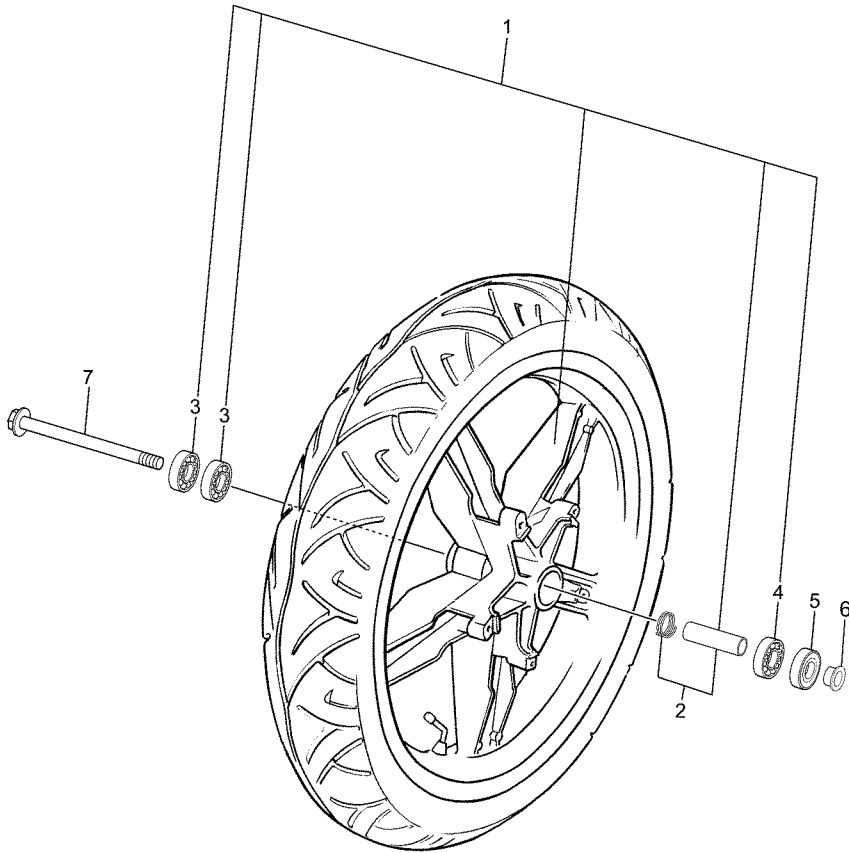 


5WX1352-B240

Ref No	Part No	Description
01	5WX-F582T-00-00	Disc, Brake (left)
02	90110-06X36-00	Bolt, Hexagon Socket Head
03	5WX-F580T-01-00	Caliper Assy (left)
04	5WX-W0057-00-00	. Piston Assy, Caliper
05	5WX-W0045-00-00	. Brake Pad Kit
06	5WX-W0048-00-00	. Bleed Screw Kit
07	5WX-F5934-00-00	. Spring, Pad
08	5WX-F5924-00-00	. Pin, Pad
09	5WX-F5917-00-00	. Boot, Caliper
10	5WX-F5937-00-00	. Boot 2
11	9581M-08025-00	Bolt, Flange

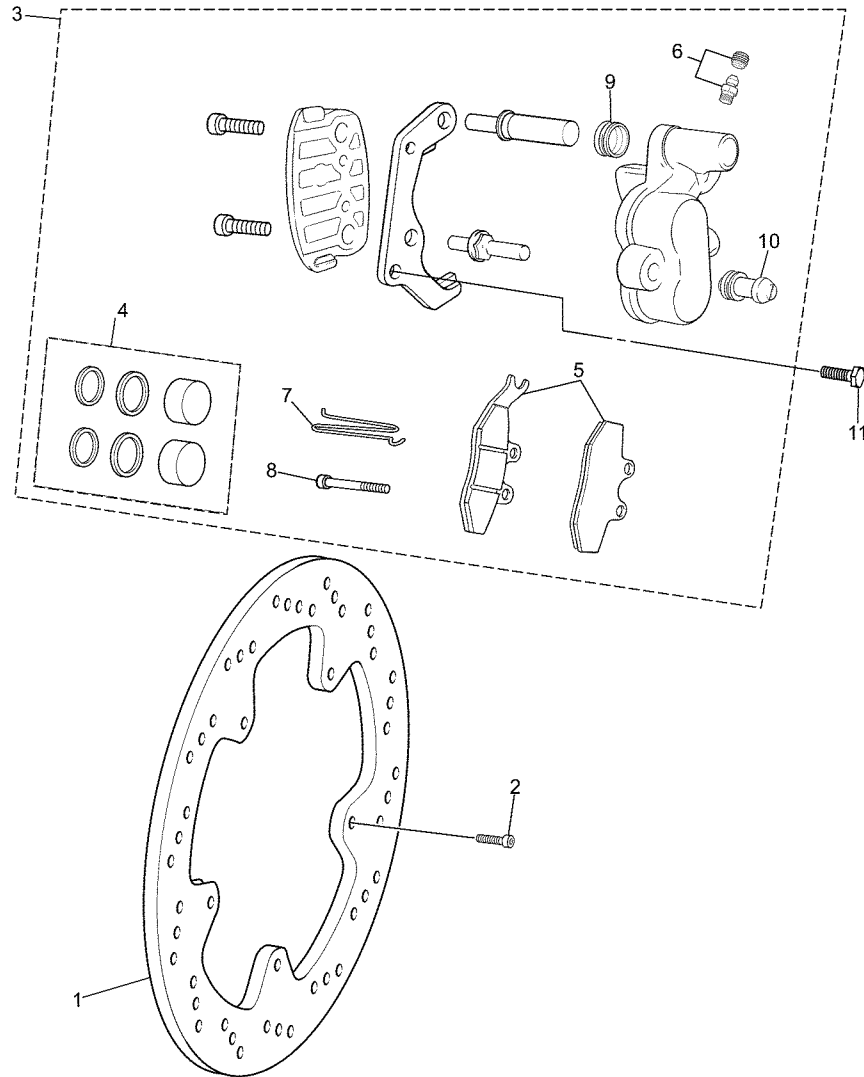 



5WX1352-B250

Ref No	Part No	Description
01	5WX-F5370-20-00	Cast Wheel, Rear
02	5WX-F5317-00-00	. . Spacer, Bearing
03	93306-302X5-00	. . Bearing
04	93306-202XU-00	. . Bearing
05	5WX-F5446-00-00	Sprocket, Driven (46t)
06	2RN-F5412-00-00	Washer
07	90101-10X04-00	Bolt
08	93102-22858-00	Oil Seal
09	93102-22826-00	Oil Seal
10	94581-91132-00	Chain
11	94681-91001-00	Joint, Chain
12	4BA-25381-00-00	Axle, Wheel
13	2RN-F5389-00-00	Puller, Chain 2
14	90101-08846-00	Bolt
15	9530L-08600-00	Nut
16	90171-14809-00	Nut, Castle
17	91401-30028-00	Pin, Cotter
18	90387-153N7-00	Collar
19	90387-15765-00	Collar

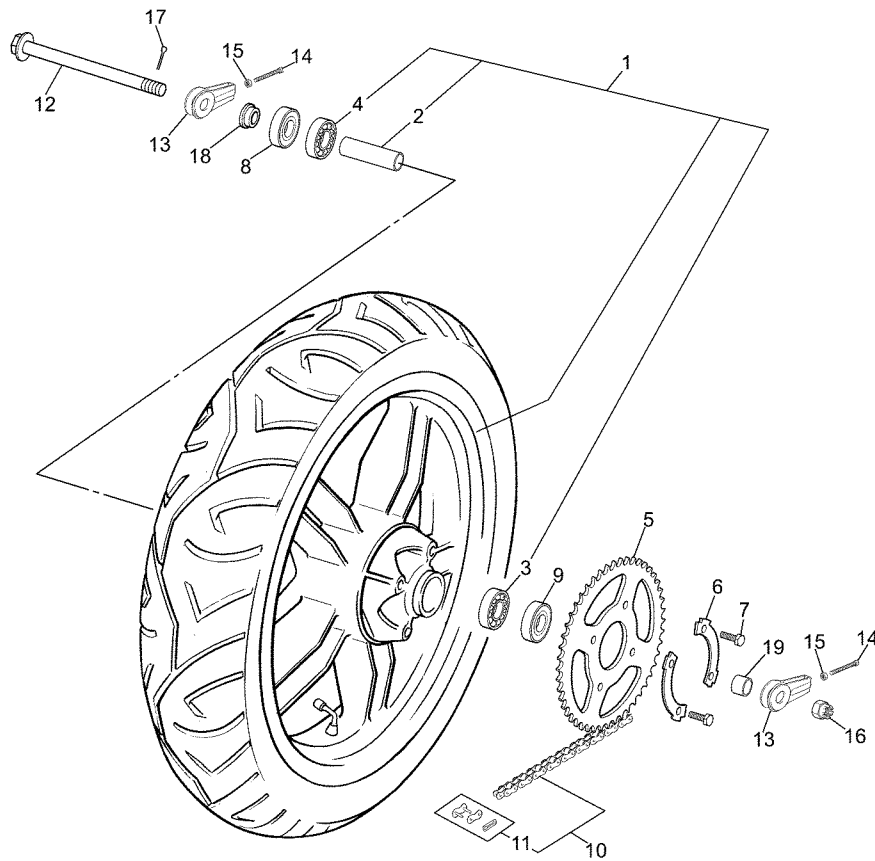 


5WX1352-B260

Ref No	Part No	Description
01	5WX-F582W-00-00	Disk, Rear Brake 2
02	90110-06X36-00	Bolt, Hexagon Socket Head
03	5WX-F580W-00-00	Caliper Assy, Rear 2
04	5WX-W0057-10-00	• . Piston Assy, Caliper
05	5WX-W0048-00-00	• . Bleed Screw Kit
06	5WX-W0045-10-00	• . Brake Pad Kit
07	5WX-F5934-00-00	• . Spring, Pad
08	5WX-F5924-10-00	• . Pin, Pad
09	5WX-F5819-00-00	Bracket, Caliper
10	9581L-08020-00	Bolt, Flange

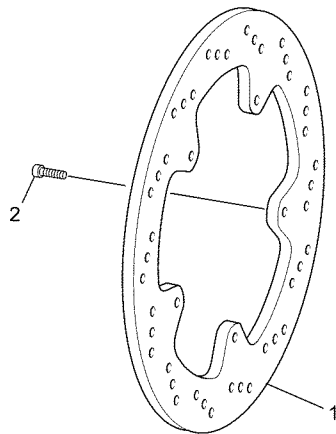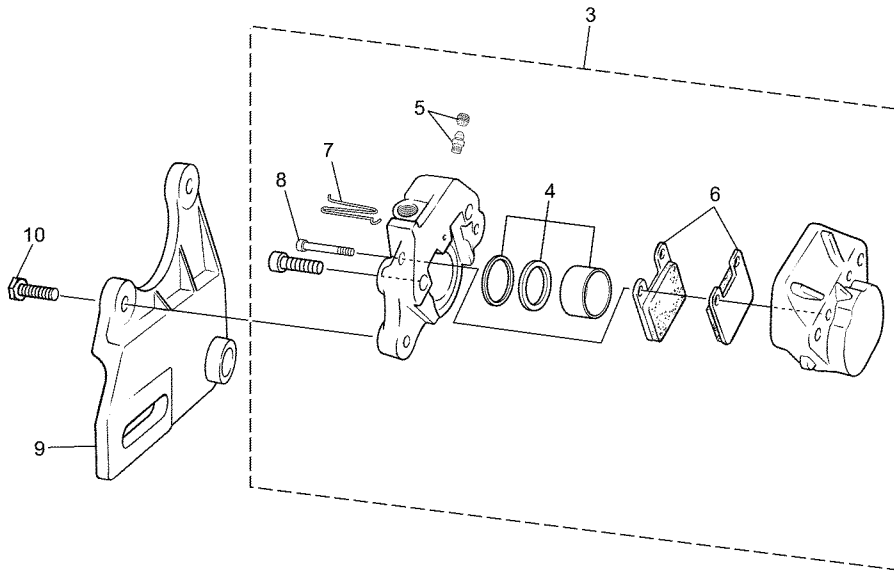  

5WX1352-B270


Ref No	Part No	Description
01	5WX-F6121-00-00	Handlebar (left)
02	5WX-F6122-00-00	Handlebar (right)
03	90110-06X62-00	Bolt, Hexagon Socket Head
04	2RN-F3469-00-00	Cap, Bolt
05	90110-08X00-00	Bolt, Hexagon Socket Head
06	2RN-F6246-00-00	End, Grip
07	5WX-F6240-00-00	Grip Assy
08	5WX-F628B-00-00	Slider, Throttle
09	5DS-H3945-00-00	Bolt, Lever
10	9530L-05600-00	Nut
11	5WX-F632F-00-00	Bolt Adjusting
12	5WX-F6316-00-00	Boot, Throttle Cable
13	5WX-F6241-00-00	Grip
14	5WX-F6260-00-00	Cable Assy, Throttle & Pump
15	5WX-F6335-00-00	Cable, Clutch
16	5WX-F6331-00-00	Cable, Starter 1

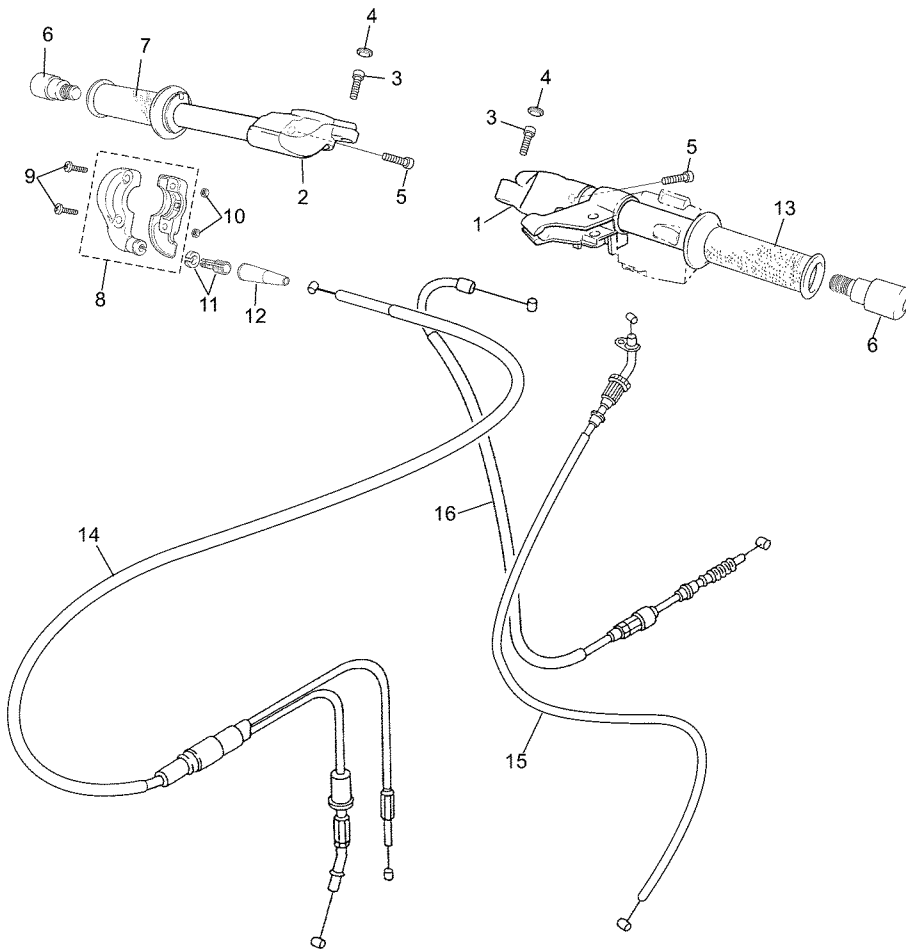 

5WX1352-B280


FRONT MASTER CYLINDER

Ref No	Part No	Description
01	5WX-F5870-00-00	Master Cylinder Sub Assy
02	5WX-W0041-00-00	• . Cylinder Kit, Master
03	5WX-F5893-00-00	• . Reservoir Cap Assy
04	5WX-F5867-00-00	Bracket, Master Cylinder
05	9201M-06020-00	Bolt, Button Head
06	5WX-H3922-00-00	Lever 2
07	90101-06X16-00	Bolt
08	9570L-06300-00	Nut, Flange
09	5WX-F5872-00-00	Hose, Brake 1
10	5WX-F5876-00-00	Holder, Brake Hose 2
11	9502L-06012-00	Bolt, Flange
12	90401-10X05-00	Bolt, Union
13	5WX-F7119-00-00	Washer
14	5T8-H3936-10-00	Band, Switch Cord

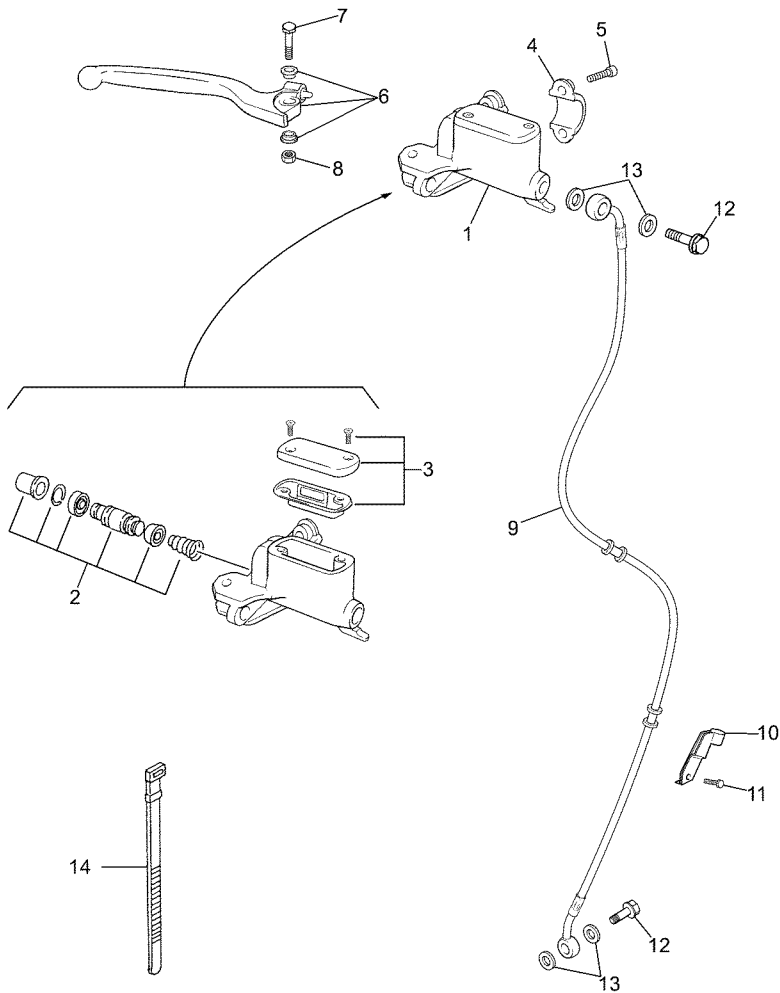 


5WX1352-B290

Ref No	Part No	Description
01	2RN-F7311-00-33	Stand, Side
02	90506-26833-00	Spring, Tension
03	4BA-F7315-00-00	Link, Side Stand
04	90109-100E8-00	Bolt
05	90185-10037-00	Nut, Self-locking
06	5WX-F7211-00-00	Pedal, Brake
07	2YK-27261-00-00	Shaft
08	9290L-10200-00	Washer
09	90468-10050-00	Clip
10	90506-20843-00	Spring, Tension
11	97014-06020-00	Bolt, Hexagon
12	95334-06600-00	Nut
13	5WX-F7442-00-LK	Bracket 2
14	4BA-F7451-00-00	Footrest
15	4BA-F7413-00-00	Cover, Footrest
16	90157-05079-00	Screw, Pan Head
17	9290M-05200-00	Washer
18	90508-20572-00	Spring, Torsion
19	90387-084N8-00	Collar
20	91701-08042-00	Pin, Clevis
21	91401-25012-00	Pin, Cotter
22	90109-086F8-00	Bolt
23	5WX-F7443-00-LK	Bracket 3
24	4BA-F7461-00-00	Footrest
25	4BA-F1441-00-00	Bracket, Stop Switch
26	9760N-06110-00	Screw, Pan Head With Washer
27	9581L-08020-00	Bolt, Flange
28	5WX-F741L-00-00	Bracket 4
29	5WX-F742L-00-00	Bracket 5
30	9581M-08025-00	Bolt, Flange
31	90201-08X17-00	Washer, Plate
32	5WX-F7431-00-00	Footrest, Rear 1
33	5WX-F7441-00-00	Footrest, Rear 2
34	90501-12743-00	Spring, Compression
35	93501-04011-00	Ball
36	90240-06042-00	Pin, Clevis
37	91401-16012-00	Pin, Cotter
38	90387-064H8-00	Collar

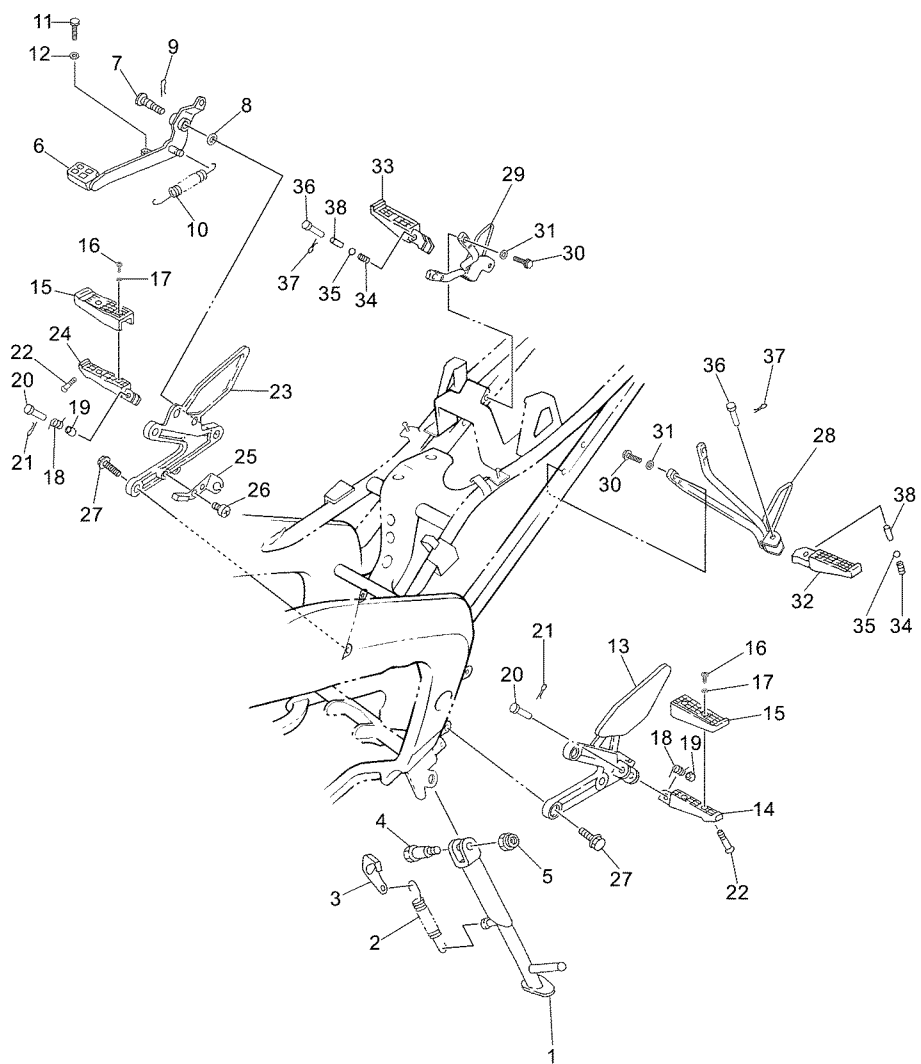 

5WX1352-B300

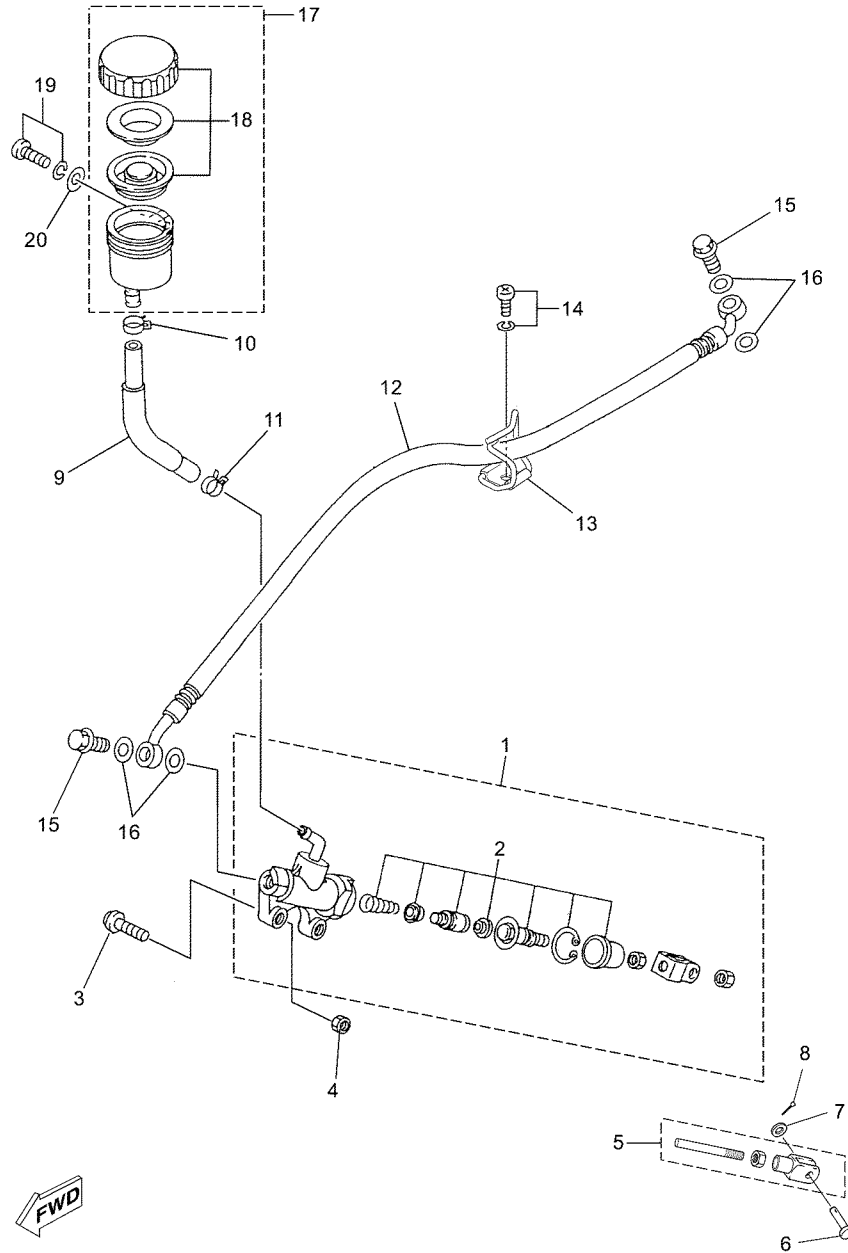 


Ref No	Part No	Description
01	5WX-F583V-00-00	Rr. Master Cylinder Assy.
02	5WX-W0042-00-00	• . Cylinder Kit, Master
03	9201L-06025-00	Bolt, Button Head
04	9570L-06300-00	Nut, Flange
05	5WX-F7230-00-00	Rod Brake Assy
06	91701-06018-00	Pin, Clevis
07	9290L-06200-00	Washer
08	91401-20012-00	Pin, Cotter
09	5WX-F5895-00-00	Hose, Reservoir
10	5WX-F1823-00-00	Clamp, Hose
11	5WX-F1823-10-00	Clamp, Hose
12	5WX-F5873-00-00	Hose, Brake 2
13	5WX-F5875-00-00	Holder, Brake Hose 1
14	9760L-06116-00	Screw, Pan Head With Washer
15	90401-10X05-00	Bolt, Union
16	5WX-F7119-00-00	Washer
17	5WX-F5804-00-00	Reserve Tank Assy.
18	5WX-F5893-10-00	• . Reservoir Cap Assy
19	9760L-06116-00	Screw, Pan Head With Washer
20	90201-06055-00	Washer, Plate


5WX1352-B310



Ref No	Part No	Description
01	5WX-F8321-00-00	Stay 1
02	90480-12236-00	Grommet
03	9570M-08500-00	Nut, Flange
04	5WX-F8381-00-00	Windshield
05	4BA-F8215-00-00	Washer, Special
06	90149-05273-00	Screw
07	9570M-05500-00	Nut, Flange
08	5WX-F8351-00-00	Body, Cowling
09	5DS-F8317-00-00	Nut, Emblem
10	5WX-F6280-01-00	Rear View Mirror Assy (left)
11	5WX-F6290-01-00	Rear View Mirror Assy (right)
12	92B16-06030-00	Bolt
13	9530M-06800-00	Nut
14	2RN-F8371-00-00	Damper
15	2RN-F8372-00-00	Damper
16	5DS-F8368-00-00	Emblem

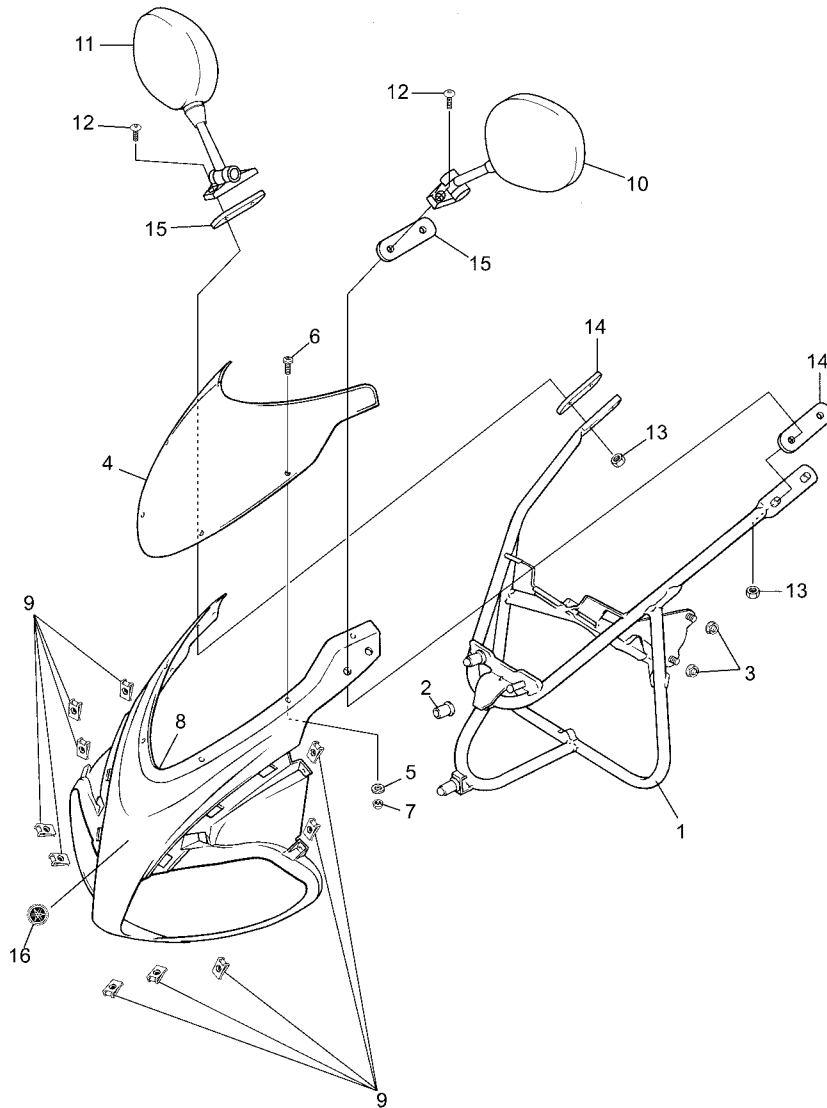 

5WX5300-C320

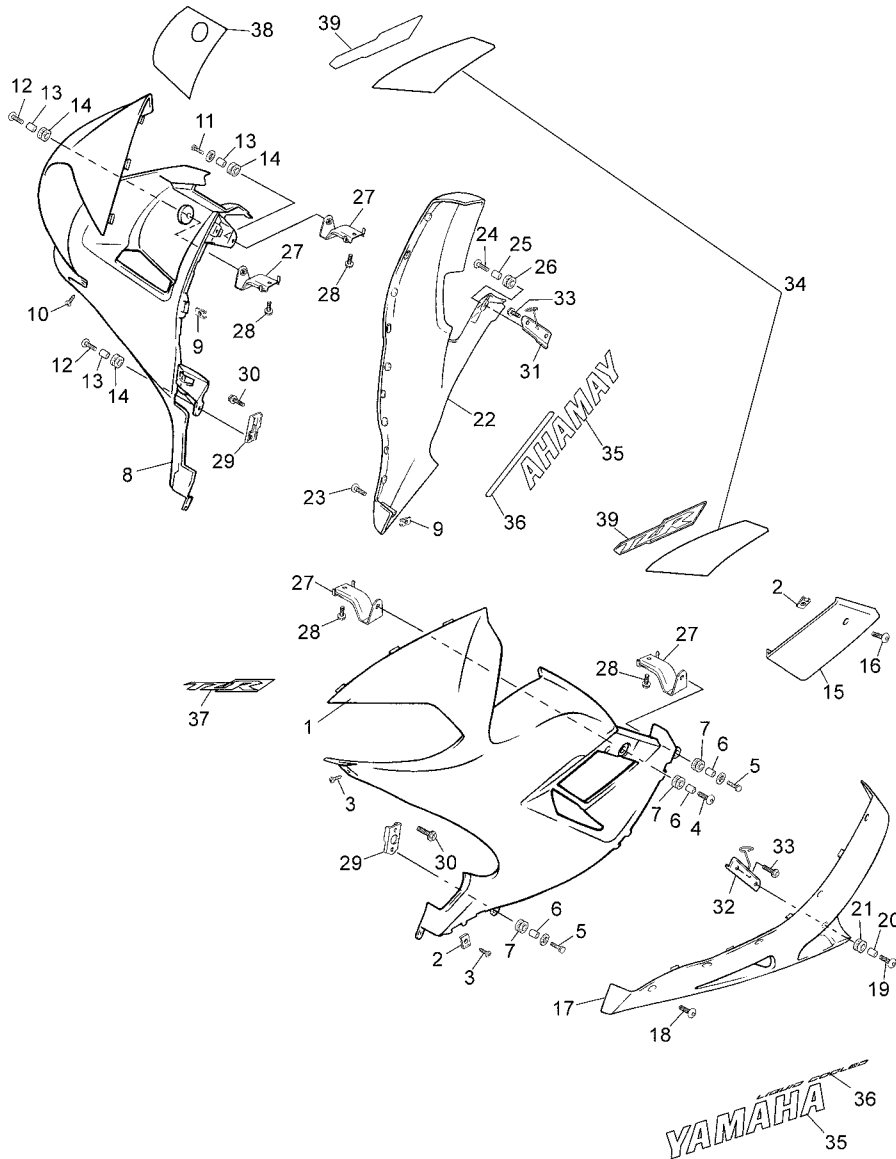 


Ref No	Part No	Description
01	5WX-F835G-00-0X	Body, Front Upper 1
01	5WX-F835G-00-1X	Body, Front Upper 1
02	5DS-F8317-00-00	Nut, Emblem
03	90167-04X00-00	Screw, Tapping
04	90110-06200-00	Bolt, Hexagon Socket Head
05	90119-06118-00	Bolt, With Washer
06	90387-067K6-00	Collar
07	90480-13398-00	Grommet
08	5WX-F835H-00-0X	Body, Front Upper 2
08	5WX-F835H-00-1X	Body, Front Upper 2
09	5DS-F8317-00-00	Nut, Emblem
10	90167-04X00-00	Screw, Tapping
11	90110-06200-00	Bolt, Hexagon Socket Head
12	90119-06118-00	Bolt, With Washer
13	90387-067K6-00	Collar
14	90480-13398-00	Grommet
15	5WX-F835U-00-00	Panel 1
16	90167-04X00-00	Screw, Tapping
17	5WX-F835J-R0-P1	Body, Front Lower 1
17	5WX-F835J-R0-P2	Body, Front Lower 1
18	90167-04X00-00	Screw, Tapping
19	90110-06200-00	Bolt, Hexagon Socket Head
20	90387-067K6-00	Collar
21	90480-13398-00	Grommet
22	5WX-F835K-R0-P1	Body, Front Lower 2
22	5WX-F835K-R0-P2	Body, Front Lower 2
23	90167-04X00-00	Screw, Tapping
24	90110-06200-00	Bolt, Hexagon Socket Head
25	90387-067K6-00	Collar
26	90480-13398-00	Grommet
27	5WX-F833K-00-00	Bracket 13
28	9580M-06012-00	Bolt, Flange
29	4BA-F833M-00-00	Bracket 15
30	9580M-06012-00	Bolt, Flange
31	4BA-F833N-10-00	Bracket 16
32	5WX-F833N-00-00	Bracket 16
33	9580M-06012-00	Bolt, Flange
34	5WX-F8390-20-00	Graphic Set, Cowling
34	5WX-F8390-30-00	Graphic Set, Cowling
35	99231-00280-00	Emblem, Yamaha
35	99234-00280-00	Emblem, Yamaha
36	5WX-F839H-10-00	Emblem 1
36	5WX-F839H-20-00	Emblem 1
37	5WX-F839J-20-00	Graphic 11
37	5WX-F839J-30-00	Graphic 11
38	5WX-F8338-00-00	Emblem
39	5WX-F832K-00-00	Graphic 12
39	5WX-F832K-10-00	Graphic 12



5WX5300-C330


Ref No	Part No	Description
01	5WX-H1400-00-00	Ac Magnet Generator Assy
02	90111-04X00-00	Bolt
03	90170-10857-00	Nut

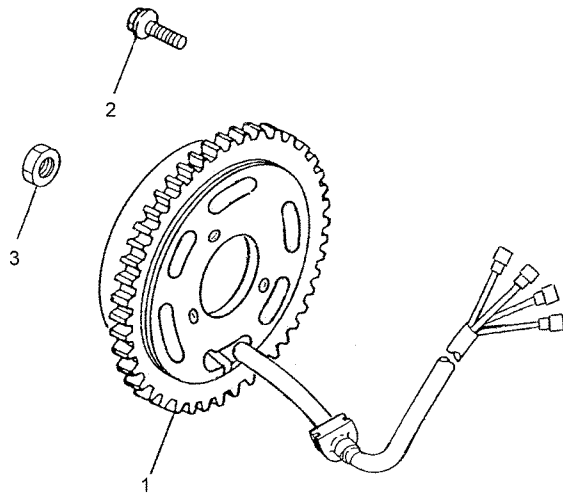 

5WX1352-B340

FLASHER LIGHT


Ref No	Part No	Description
01	5WX-H3330-00-00	Rear Flasher Light Assy 1
02	5HT-H3332-00-00	• . Lens, Flasher
03	5AD-H3333-00-00	• . Screw, Lens Fitting
04	3TH-H3311-00-00	• . Bulb, Flasher
05	5WX-H3340-00-00	Flasher Light Assy 2
06	5HT-H3332-00-00	• . Lens, Flasher
07	5AD-H3333-00-00	• . Screw, Lens Fitting
08	3TH-H3311-00-00	• . Bulb, Flasher
09	9890M-06016-00	Screw, Bind
10	9570N-06500-00	Nut, Flange

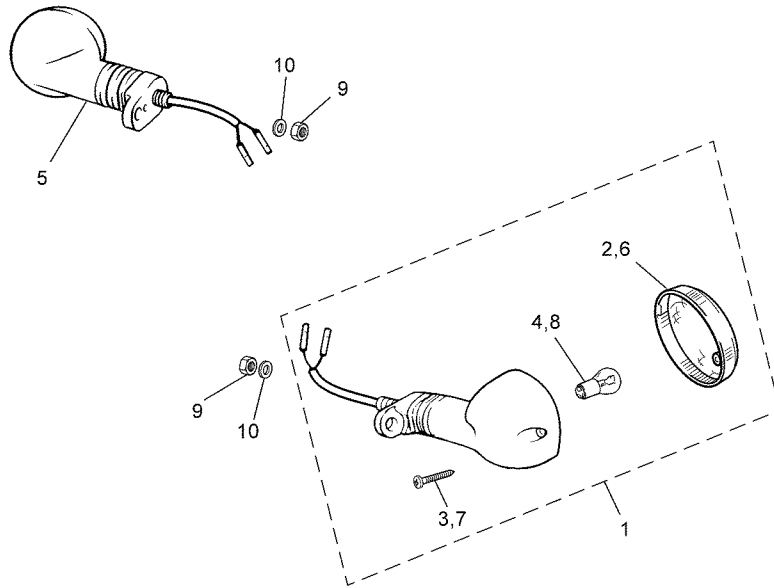 

5WX1352-B350


Ref No Part No Description

01	5WX-H350A-00	Meter Comp.
02	5WX-H353G-00	. Case, Upper
03	5WX-H3517-00	. Bulb
04	5WX-H3513-00	. Damper
05	5WX-H352K-00	. Plug, Blind
06	90111-05010-0	Bolt
07	5WX-H3523-00	Damper
08	90387-05X04-0	Collar
09	90201-05031-0	Washer, Plate
10	5WX-H3756-00	Sensor, Unit
11	5RW-F3317-00	Holder, Cable
12	9502L-06012-0	Bolt, Flange

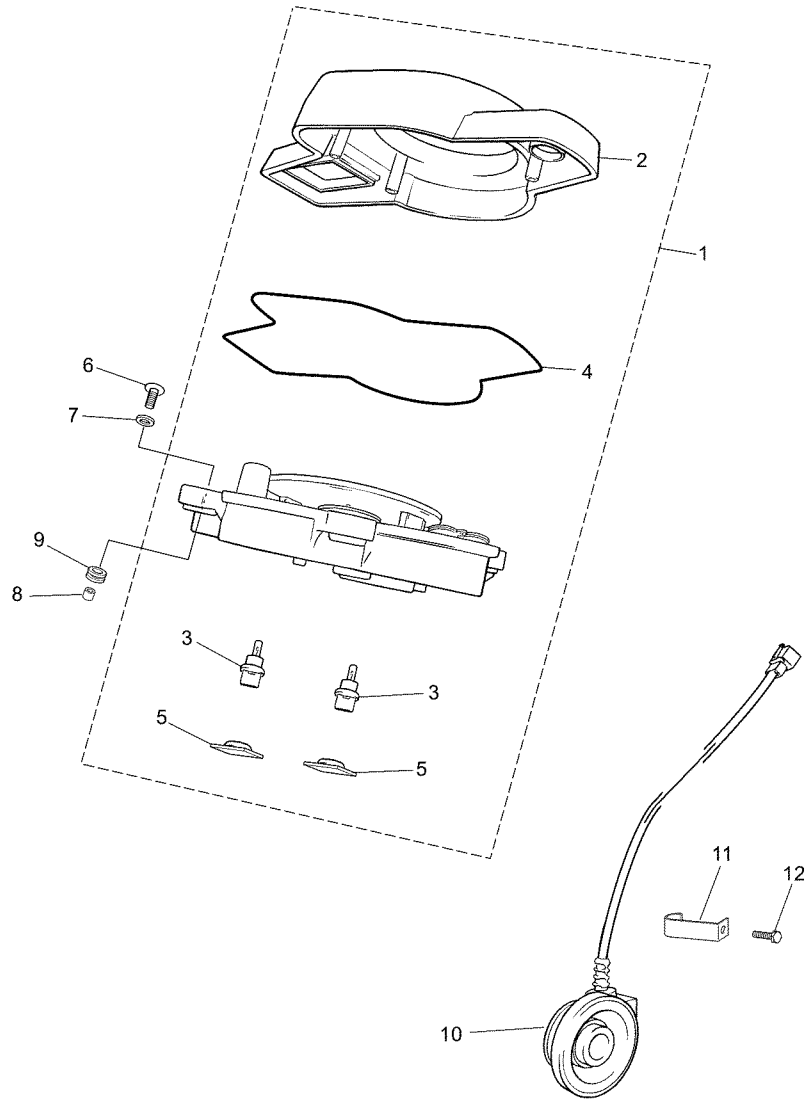 


5WX1352-B360

Ref No	Part No	Description
01	5WX-H4110-00-00	Headlight Unit Assy
02	3WG-H4314-00-00	. Bulb, Headlight
03	3WG-H4312-00-00	. Holder, Socket
04	3WG-H4324-00-00	. Spring, Reflector
05	5DU-H4197-00-00	. Cover, Socket
06	5WX-H3311-00-00	. Bulb, Flasher
07	5RW-H331F-00-00	. Socket
08	5WX-H4159-00-00	. Cord, Headlight
09	5WX-H4310-00-00	Headlight Unit Assy
10	3WG-H4314-00-00	. Bulb, Headlight
11	3WG-H4312-00-00	. Holder, Socket
12	3WG-H4324-00-00	. Spring, Reflector
13	5DU-H4197-00-00	. Cover, Socket
14	5WX-H3311-00-00	. Bulb, Flasher
15	5RW-H331F-00-00	. Socket
16	5WX-H4359-00-00	. Cord, Headlight
17	90167-04X00-00	Screw, Tapping

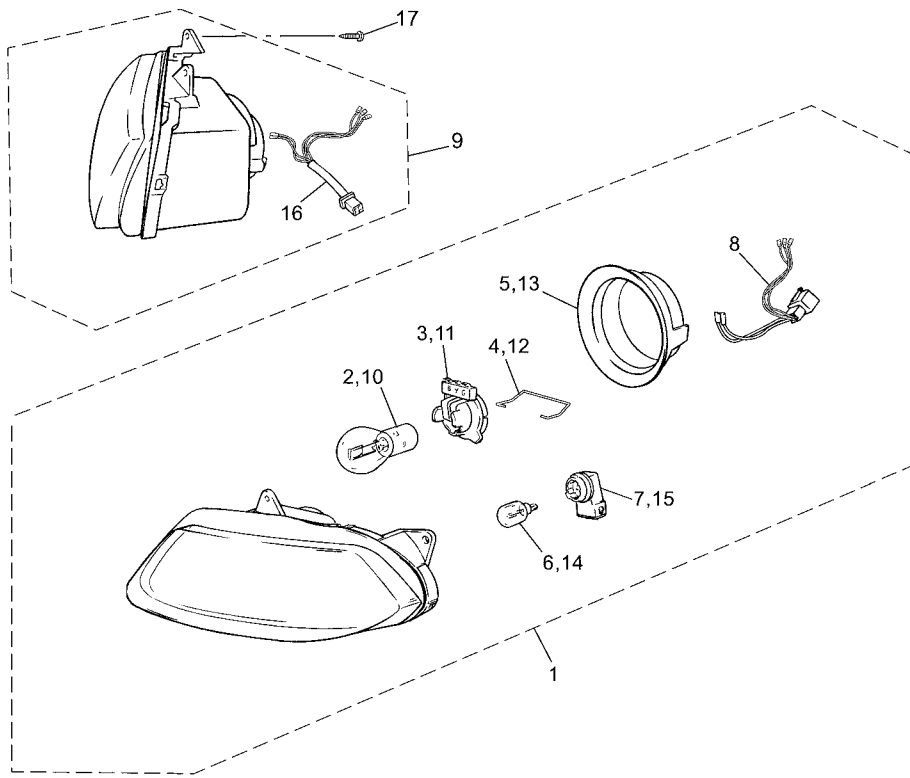 

5WX5300-C370


Ref No	Part No	Description
01	5WX-H4710-00-00	Taillight Unit Assy
02	5WX-H4711-00-00	• . Base, Taillight
03	5WX-H4723-00-00	• . Gasket, Tail Lens
04	4BA-H4714-00-00	• . Bulb
05	5WX-H4721-00-00	• . Lens, Taillight
06	5AD-H3333-00-00	• . Screw, Lens Fitting
07	9580M-06012-00	Bolt, Flange
08	4BA-H5130-00-00	Rear Reflector Assy
09	9570M-05500-00	Nut, Flange

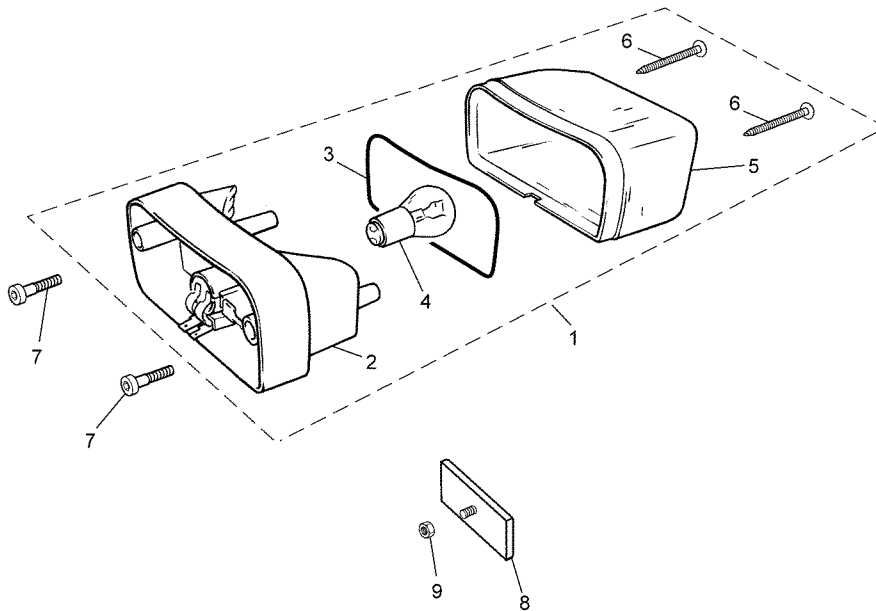 


5WX1352-B380

HANDLE SWITCH & LEVER

Ref No	Part No	Description
01	5WX-H3912-00-00	Lever 1
02	5WX-H2911-00-00	Holder, Lever 1
03	90123-08X01-00	Bolt
04	90179-08X05-00	Nut
05	5WX-H3945-00-00	Bolt, Lever
06	90185-06837-00	Nut, Self-locking
07	9131M-06020-00	Bolt
08	3YX-82917-01-00	Switch
09	98707-03020-00	Screw, Flat Head
10	5WX-H3972-00-00	Switch, Handle 4
11	5WX-H395X-00-00	• . Screw, Switch Fitting 1
12	5WX-H395Y-00-00	• . Screw, Switch Fitting 2
13	5WX-H3941-00-00	• . Lever, Starter
14	5WX-H3973-00-00	Switch, Handle 3
15	5WX-H395X-10-00	• . Screw, Switch Fitting 1
16	5WX-H3980-00-00	Front Stop Switch Assy

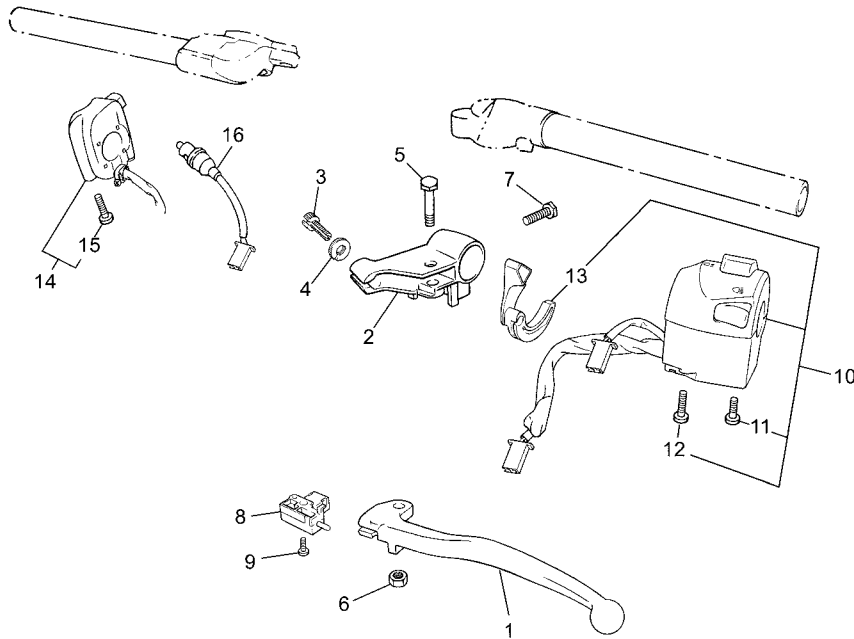 

5WX5300-C390

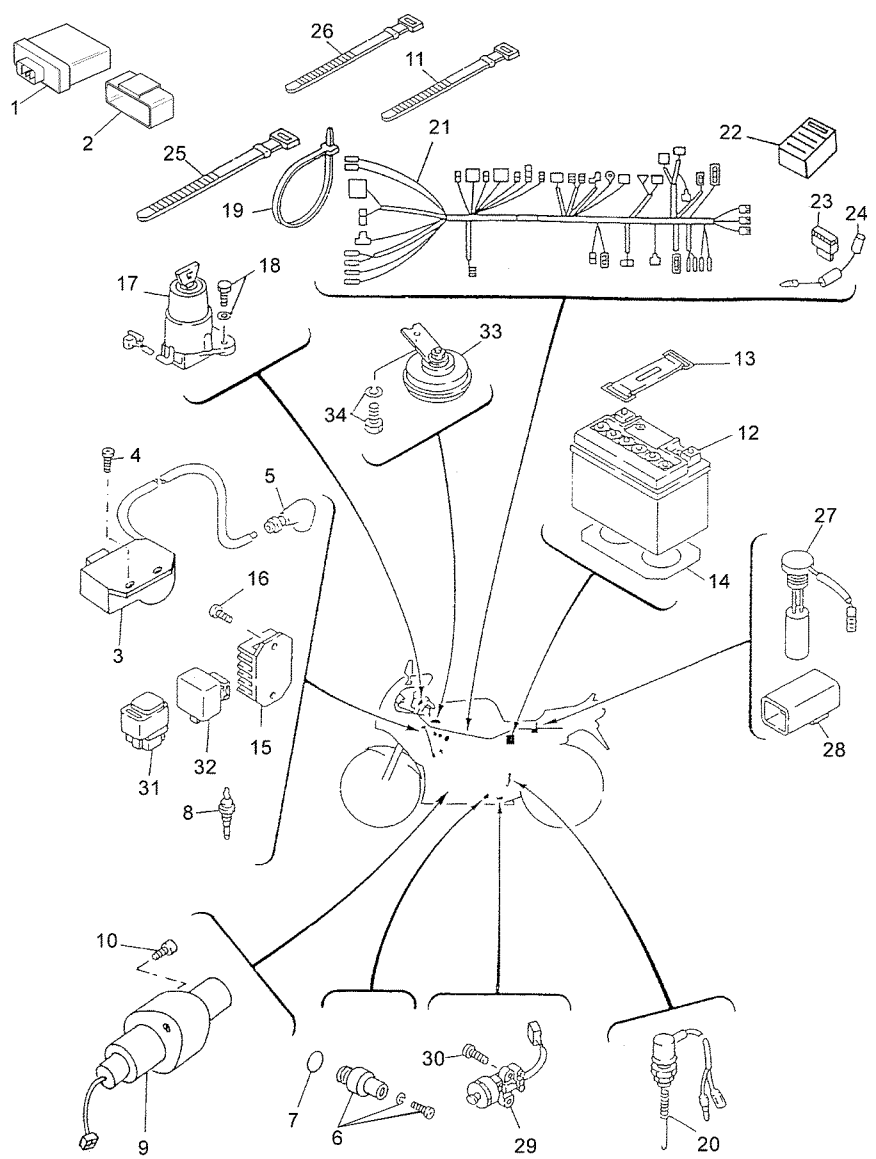 

Ref No	Part No	Description
01	5WX-H5540-00-00	C.d.i. Unit Assy
02	4BA-H5546-00-00	Band
03	5WX-H2310-00-00	Ignition Coil Assy
04	9700L-06016-00	Bolt
05	2JW-H2370-00-00	Plug Cap Assy
06	3NC-H2540-00-00	Neutral Switch Assy
07	90430-09824-00	Gasket
08	5WX-H2560-10-00	Thermo Switch Assy
09	4YV-H1800-10-00	Starting Motor Assy
10	90110-06X23-00	Bolt, Hexagon Socket Head
11	90464-50X03-00	Clamp
12	5KK-H2100-00-00	Battery Assy
13	4BA-H2131-00-00	Band, Battery
14	4BA-H2122-00-00	Seat, Battery
15	5RN-H1960-00-00	Rectifier & Regulator Assy
16	9502L-06012-00	Bolt, Flange
17	5WX-W2501-00-00	Main Switch Steering Lock
18	90110-08X04-00	Bolt, Hexagon Socket Head
19	90464-21X00-00	Clamp
20	4BA-H2530-00-00	Stop Switch Assy
21	5WX-H2590-00-00	Wire Harness Assy
22	4BA-H2155-00-00	Band
23	4BA-H2151-00-00	Fuse
24	4YV-H1980-00-00	Diode Assy
25	5T8-H3936-10-00	Band, Switch Cord
26	90464-50X03-00	Clamp
27	3VL-H5720-10-00	Oil Level Gauge Assy
28	5RN-H1950-00-00	Relay Assy
29	3LD-82566-50-00	Switch, Side Stand
30	90110-05822-00	Bolt, Hexagon Socket Head
31	5DS-H1950-00-00	Relay Assy
32	5WX-H3350-00-00	Flasher Relay Assy
33	4MJ-H3371-00-00	Horn
34	9750M-06412-00	Bolt, With Washer



5WX1352-B400